

Supersedes edition 12/17/2018



LED INSET APPROACH LIGHT

LIRA

INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

Compiled by: Emidio Rauli

Approved by: Piero Scaramagli

N° Attachments:

Copy n°:

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

LIMITED PRODUCT WARRANTY

THE FOLLOWING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT BY WAY OF LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.

OCEM - ENERGY TECHNOLOGY warrants to each original Buyer of Products manufactured by the Company that such Products are at the time of delivery to the Buyer, free of material and workmanship defects, provided that no warranty is made with respect to:

- (a) any Product, which has been repaired or altered in such a way, in Company's judgement, as to affect the Product adversely;
 - (b) any Product which has, in Company's judgement, been subject to negligence, accident or improper storage;
 - (c) any Product which has not been operated and maintained in accordance with normal practice and in conformity with recommendations and published specification of Company;
 - (d) the breaking of the warranty seals, if present, determines the immediate termination of the warranty;
- and,

OCEM - ENERGY TECHNOLOGY's obligation under this warranty is limited to use reasonable efforts to repair or, at its option, replace, during normal working hours at the facility of the Company, any Product which in its judgement proved not to be as warranted within the applicable warranty period. All costs of transportation of Products claimed not to be warranted and of those repaired or replaced, to or from the facility of the Company shall be borne by Purchaser. Company may require the return of any Product claimed not to be as warranted to its facility, transportation prepaid by Purchaser, to establish a claim under this warranty. The cost of labour for the installation of a repaired or replaced Product shall be borne by Purchaser. Replacement parts provided under the terms of this warranty are warranted for the remainder of the warranty period of the Products upon which they are installed to the same extent as if such parts were original components thereof. Warranty services provided under the Agreement do not assure uninterrupted operations of Products; Company does not assume any liability for damages caused by any delays involving warranty service.

IMPORTANT: READ THIS DOCUMENT

Before proceeding to the operations of installation, commissioning, operation, maintenance or disposal, carefully read the entire document.

SAFETY INFORMATION

Extreme caution should be exercised when working with this equipment; it is normally used or connected to circuits that operate at dangerous voltages and can be fatal.

The following section contains important safety information that you must follow when installing and using the apparatus.

Misuse of the equipment or lack of care in applying safety procedures and prescriptions specified in this document, may result in a hazard.

Avoid contact with voltage or current sources.

For no reason the protections and the safety devices must be removed.

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE**OPERATION ON THE EQUIPMENT - SKILLS**

Operation on the equipment and access to its internal parts shall be done by experienced personnel, adequately trained and aware of the risks related to electricity and high voltages. Safety rules shall be adopted when operating on the equipment, or on cables and other apparatus connected to the it

DO NOT OPERATE ON ENERGIZED CIRCUITS

Do not carry out any operation on the converter or on apparatus connected to it when the circuits are energized.

WHEN HANDLING AND SERVICING THIS EQUIPMENT, OBSERVE PRECAUTIONS FOR HIGH VOLTAGE EQUIPMENT.

Before any access, inspection or intervention, be sure to have switched-off the unit, opened the main circuit breaker and removed the supply to the unit (by opening the circuit breaker/switch on the distribution board at the beginning of the supply line).

Then wait discharge time (at least 5 minutes), ground carefully the system, and check for voltage presence before accessing..

REANIMATION

The maintenance staff must be aware of the risks related to electricity, criteria to prevent the risk of electric shock and resuscitation techniques

CE MARK

This equipment complies with the requirements of European regulations for the CE mark. The user has to respect all prescriptions reported in this document.

This equipment complies with the requirements of the EEC directives 2004/108/EEC and 2006/95/EEC with regard to "Electromagnetic Compatibility" and "Low Voltage Electrical Apparatus" respectively.

OUT OF SERVICE

In case of dismantling, decommissioning, destruction, disposal, the user shall follow all the required precautions for component and material elimination, according to local rules and applicable law.

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE**EDITIONS****Date**

03/10/2015	First issue
05/07/2017	Added ground wire specifications

REVISIONS

Index	Date	Description	Edited by	Approved by
01	12/14/2018	Added spare parts. New power supply cable lead. Image update. New lower cover image.	EBER	MMAZ
02	17/12/2018	Spare parts correction	EBER	MMAZ
03	04/02/2019	Spare parts correction	EBER	MMAZ

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE**INDEX**

1	GENERAL	7
2	MAIN FEATURES	7
2.1	REMOVABLE LIGHT UNIT	7
2.1.1	Dome.....	7
2.1.2	Optical Assembly	8
2.1.3	Power Supply/Control Board.....	8
2.1.4	Lower Cover.....	9
2.2	SHALLOW BASE	12
2.3	ELECTRONIC SECTION	13
2.3.1	Current / current conversion circuit (patented).....	13
2.3.2	LED command circuit.....	14
2.3.3	Control circuit	14
3	INSTALLATION	15
3.1	PAVEMENT BORING AND SAWCUTTING.....	15
3.1.1	Scheme of Light Configurations.....	16
3.2	INSTALLING THE SHALLOW BASE	17
3.3	INSTALLING THE LIGHT UNIT ON L-868 BASE, SIZE B.....	21
3.4	SECONDARY WIRING.....	22
4	MAINTENANCE	22
4.1	MAINTENANCE PROGRAM.....	23
4.1.1	Periodical Checks	23
4.1.2	Snowplow Operations	23
4.2	REMOVING AND OPENING THE LIGHT UNIT FROM THE BASE	24
4.2.1	Removing the fixture	24
4.2.2	Opening the fixture.....	24
4.2.3	Closing the fixture.....	24
4.2.4	Leakage test.....	25
4.2.5	Reinstalling the fixture.....	25
4.3	PRIMS CLEANING	26
4.3.1	Prism outside cleaning.....	26
4.3.2	Prism inside cleaning	26
4.4	PRISM REPLACEMENT	26
4.4.1	Removing the Prism.....	26
4.4.2	Installing the New Prism.....	26
4.5	LED MODULE REPLACEMENT	27
4.6	ELECTRONICS REPLACEMENT.....	28
4.7	GASKETS	28
4.7.1	Gasket examination	28
4.7.2	O-Ring replacement.....	29
4.8	CABLE LEAD WITH PLUG	29
4.8.1	Removing the cable lead with plug	29

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

4.8.2	Installing the new cable lead with plug	30
4.9	PRESSURE VALVE.....	30
4.10	CLEANING	31
4.11	MONITORING	31
5	TROUBLESHOOTING	33
6	SPARE PARTS.....	34

INDEX OF FIGURES

Figure 1 – 12” Dome outside view	8
Figure 2 – Lower Cover Outside View	9
Figure 3 – Lower Cover Inside View	10
Figure 4 – Wiring Diagram	10
Figure 5 – Exploded View	11
Figure 6 – Part List.....	11
Figure 7 - Complete P/N identification	12
Figure 8 – Standard 12” shallow base.....	13
Figure 9 – Pavement Boring, Sawcutting and Joint Intersection Details.....	15
Figure 10 – Example of Light Unit Configuration	16
Figure 11 – Gaskets for 12” shallow base	19
Figure 12 – 12” shallow base for side or bottom ducts (method “B”)	20
Figure 13 – Shallow base installation details	20
Figure 14 – Optical device (refer to the manual UT-MT-0485 for further information)	21
Figure 15 – Gaskets for L-868 base	22
Figure 16 - Lower Cover Fixing Screws.....	25
Figure 17 - Lower Cover with Pressure Valve	25
Figure 18 – Fixture Gaskets.....	25
Figure 19 - Prism Cleaning.....	26
Figure 20 - Prism Replacement	27
Figure 21 – LED Module Replacement.....	28
Figure 22– Fixture Gaskets.....	29
Figure 23 – Prism Gasket.....	29
Figure 24 - Cable Lead With Plug	30
Figure 25 - Lower Cover with Pressure Valve	31
Figure 26 - Restoring the Monitoring Device.....	32

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

1 GENERAL

LIRA inset LED approach light is high intensity, unidirectional, 12" steady burning type.

These fixtures are intended for use as approach, in order to provide a visual aid to the moving aircraft.

LIRA lights are in compliance with ICAO Annex 14 Vol.1, FAA AC 150/5345-46 (Style 3), IEC TS 61827 (Style 4) and NATO-STANAG 3316.

The fixtures described in this manual are designed to be connected to series circuit, replacing those equipped with incandescent lamps, fed through standard isolation transformers connected to CCR with variable current from 2.8 A to 6.6 A.

Location of these fittings shall be in compliance with ICAO - Annex 14, STANAG 3316 and FAA.

2 MAIN FEATURES

Each light assembly consists of a removable fixture and a shallow base receptacle. The fixture is waterproof and designed to withstand aircraft impact and roll-over loads without damage.

The beam toe-in is obtained inside the light unit through different positioning of the light source. In this way all lights result mechanically identical and the shallow base installation becomes very easy because no precise toe-in is required during civil works.

Power consumption 73 VA in white light and 61 VA in red light.

2.1 REMOVABLE LIGHT UNIT

The removable fixture mainly consists of a dome, an optical assembly, a power supply/control board, and a lower cover.

2.1.1 Dome

The dome is made of treated drop-forged aluminium and includes two windows to seat the prisms, complete with gaskets, kept in the proper position by means of a mounting plate fixed with HSCS M5x12 screws. In correspondence of the windows, the dome is outside provided with identification letters "A".

The dome is provided with six through holes for fastening the light unit to the base.

It is also provided with two suitable slots, in opposite position, to make easy the fixture removal by using two suitable lifting tools (available on request, P/N 332.4140 or 332.4230). As alternative, two screwdrivers can be used.

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

A silicone O-Ring (separately supplied) has to be mounted outside around the dome, to avoid dirt deposits between dome and shallow base.

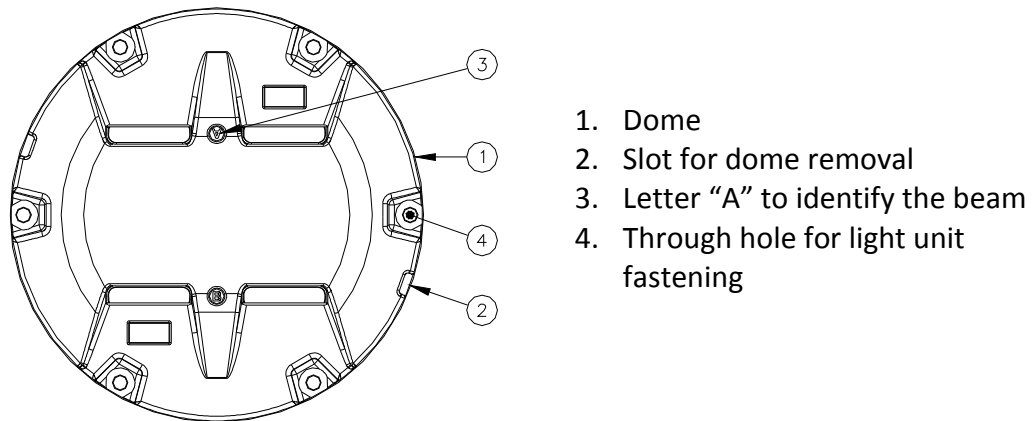


Figure 1 – 12” Dome outside view

2.1.2 Optical Assembly

The **optical assembly** consists of two prisms (Figure 5 - n°13) with relevant gaskets (Figure 5 - n°12) kept into the proper position by mounting plate (Figure 5 - n°15) and two LED module (Figure 5 - n°7) with relevant lens array (Figure 5 - n°6).

Three optical assemblies, with toe-in, are available for this fixture:

- Straight “S”
- Left “R”
- Right “L”

LED module consists of twelve LEDs mounted on a metal core PCB, coupled with the support through thermo conductive material; the lens array is fixed to the support assembly.

All the optical assembly parts are factory assembled; they may be field-replaced if necessary.

2.1.3 Power Supply/Control Board

The power supply/control board is encapsulated into waterproof and heat conductive silicon resin.

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

The PCB powers and controls the LEDs so that the light output provided at every current step from 2.8 A to 6.6 A is comparable to a traditional halogen lamp, according to the requirements of FAA “Engineering Brief N°67” document.

2.1.4 Lower Cover

The **lower cover** consists of a treated aluminium casting; it is fastened to the dome by means of six screws TORX SFH M5x10. Two O-Ring are provided between dome and lower cover. The dome is equipped with a reference pin for its proper positioning.

The cover is provided with one threaded hole for cable entry and external grounding screw with XHHW cable, 600V, AWG12, length 0.5 m (with faston terminal). A suitable valve is outside mounted for the leakage test.

Watertightness between fixture and shallow base is ensured by means of an O-Ring (separately supplied) to be placed on the relevant shallow base groove.

The fixture is supplied with one cable lead with L-823 plug; it consists of two single-pole cable Style 1, 0,460 m long. The plug is in compliance with FAA AC 150/5345-26 for very quick coupling with the receptacle mounted on the shallow base.

The fixture is 304 mm in diameter and 107 mm (+ 18,5 mm for plugs) high; the protrusion above the ground is less than 6.35 mm.

An identification data label is externally applied over the lower cover (Figure 2– n°2). Moreover, to identify quickly the beam colour, the letter “A” of the dome in front of the window is painted in the same colour of the light beam.

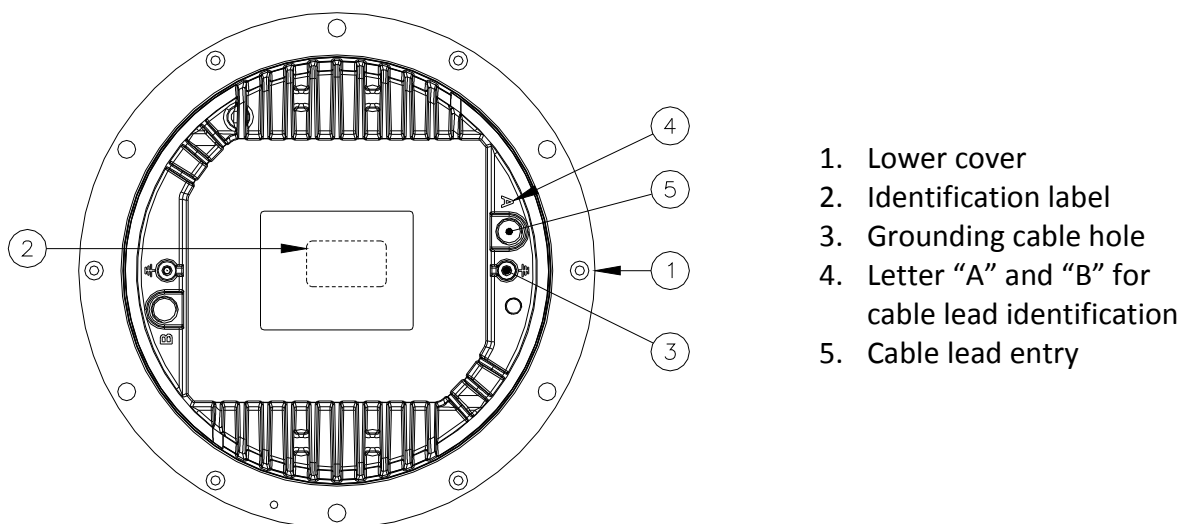


Figure 2 – Lower Cover Outside View

The same colour painting is provided outside on the lower cover.

See “Complete P/N identification” figure for P/N information.

All hardware is made of stainless steel.

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

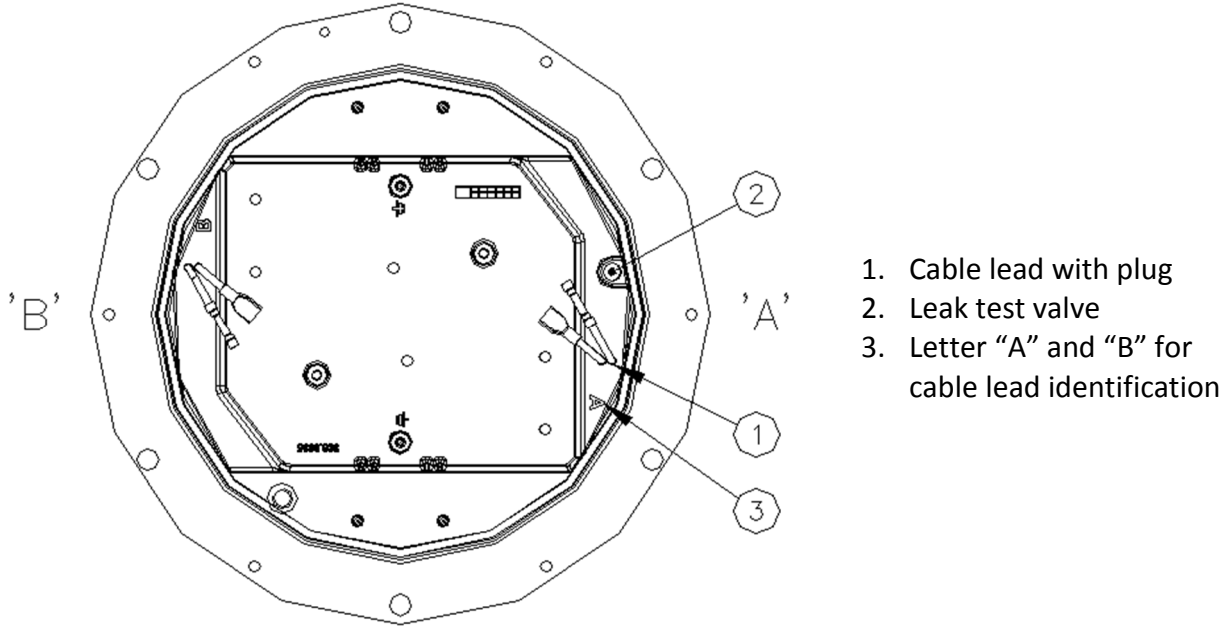


Figure 3 – Lower Cover Inside View

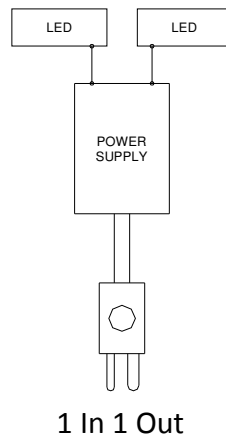


Figure 4 – Wiring Diagram

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

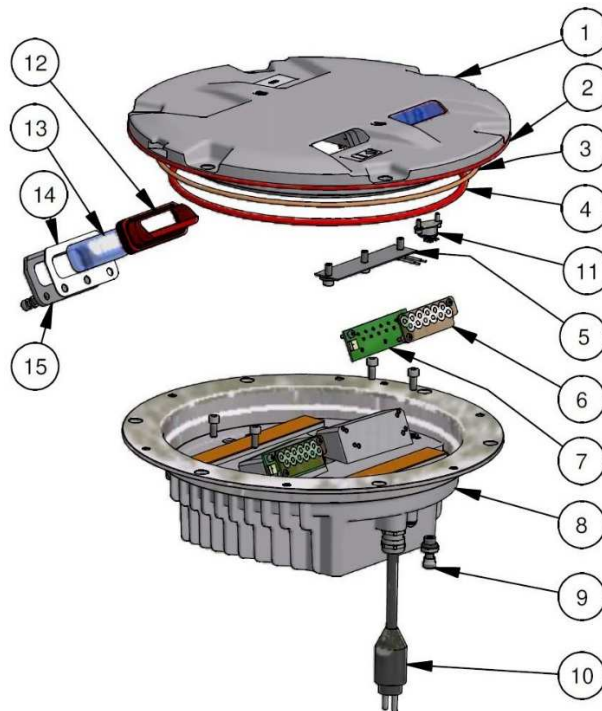


Figure 5 – Exploded View


No.	Description	Qty
1	Dome	1
2	O-Ring for dome (external).....	1
3	O-Ring for dome (internal)	1
4	O-Ring for lower cover.....	1
5	Arctic kit heater	1
6	Lens array with hardware.....	2
7	LED module.....	2
8	Lower cover	1
9	Valve for watertightness test	1
10	FAA L-823 plug.....	1
11	Arctic kit thermostat.....	1
12	Prism gasket.....	2
13	Prism	2
14	Prism holder gasket	2
15	Mounting plate	2

Figure 6 – Part List

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

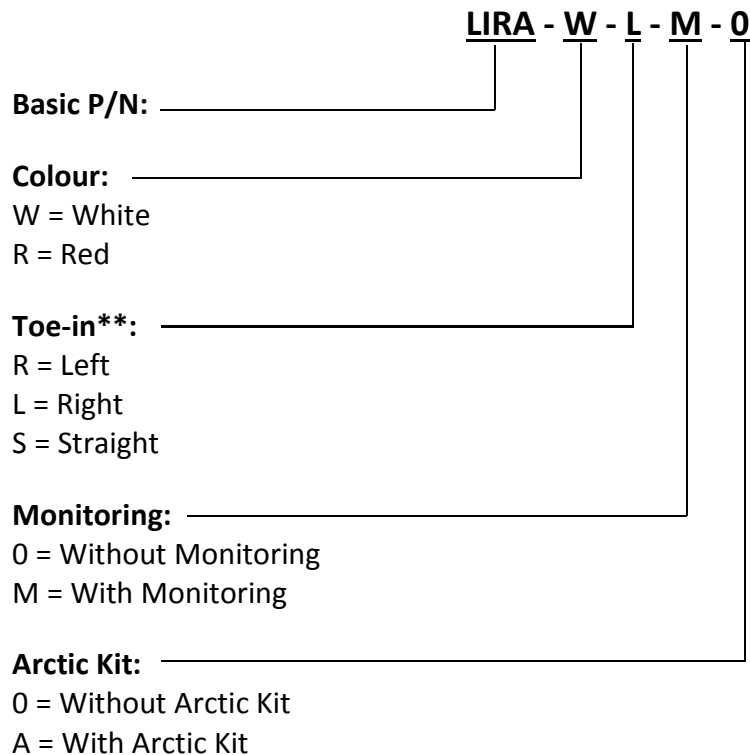

* The beam aiming is not field adjustable

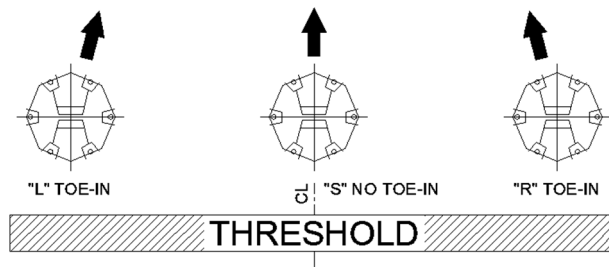


Figure 7 - Complete P/N identification

2.2 SHALLOW BASE

The **shallow base** (Figure 8) consists of a treated aluminium casting containing an electrical feed-thru system to connect the power cables, consisting of one cable lead with receptacle incoming inside the base through one cable gland. The cable lead with receptacle consists of two single-pole leads, size 2.5 mm², 1.00 m long, with FAA L-823 receptacle.

The letters "A" and "B" are printed inside the base for cable leads identification.

The base is equipped with an internal grounding screw with XHHW, 600V, AWG12 cable lead, 0.250 m long, with female faston terminal for quick connection to the

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

corresponding of the fixture. An additional external grounding screw is provided close to the cable entry.

The shallow base is designed for cementing in place by means of epoxy-resin in a hole drilled in the pavement.

The fixture has to be fastened to the base by means of six hex cap screws, complete with external silicon-coated lock-washer.

A gasket (separately supplied) must be placed between base and fixture for watertightness (Figure 8 - n°9) placed in the relevant shallow base groove.

The 12" shallow base is 320 mm in diameter and 150 mm high.

On request, special bases without cable leads can be supplied, provided with holes suitable for conduit connections.

Inside the base two suitable holders (Figure 8 - n°7) are provided to properly sustain the secondary power cable, in case of this cable is inside incoming through a conduit.

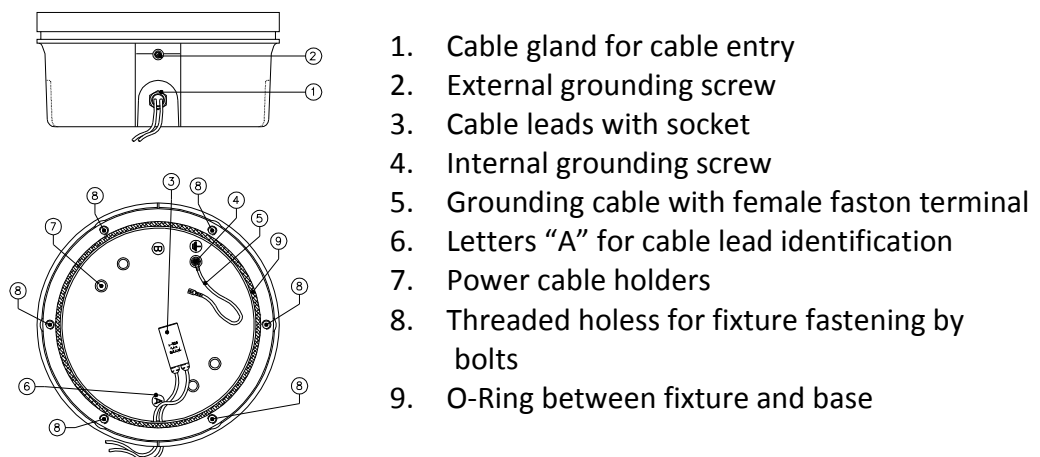


Figure 8 – Standard 12" shallow base

2.3 ELECTRONIC SECTION

The electronic section consists of the following circuits:

- Current / current conversion circuit
- LED command circuit
- Control circuit

2.3.1 Current / current conversion circuit (patented)

This electronic section provide a conversion from the input current value (within range from 2.8 A to 6.6 A) to the specified LED current value.

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

This conversion, performed in one transformation only, allows to achieve several benefits:

- minimize the power losses
- significant increase of efficiency
- high input power factor
- independent form the CCR topology: the CCR may have any output current waveform
- no percentage of load dependent: the CCR can feed without any problem also few lights in the series circuit
- isolation transformers of smaller size can be used, respect to those used with the equivalent fixtures equipped with halogen lamps

The input circuit is protected against over-voltage, tested in accordance with the requirements in FAA "Engineering Brief N°67" document.

2.3.2 LED command circuit

A PWM technique is used to command the LEDs. As known LEDs need to be supplied with a constant current; therefore in order to vary the luminous emission with a proper linearity is necessary the supply current will be applied at impulses. In other words, the LED luminous output depends on the time of application (duty-cycle) of constant current impulses.

2.3.3 Control circuit

The main task of the control circuit is to assure the correct LED light emission according to the series circuit current.

To perform this features, the circuit is provided with a current sensor that generate a signal proportional to the series circuit current.

This signal is analyzed by a DSP which perform a RMS conversion of the input current.

The RMS conversion give a good accuracy with any input current waveform.

Other functions:

- diagnostic, auxiliary voltage control and LED status control. In case of any LED failure or relative power supply circuit failure, the electronic control circuit commands the intervention of the monitoring device so that the secondary side of the isolation transformer becomes open, like in the case of an incandescent lamp failure. This features is essential when the monitoring option is required
- events recording (not-volatile memory) for diagnostic purposes
- PC operator interface through serial connection: this features allows to calibrate the brightness depending on the current, to modify the emission curve, to read the events occurred during the operating time

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

3 INSTALLATION

3.1 PAVEMENT BORING AND SAWCUTTING

Drill each recess in pavement following the instruction in

Figure 9.

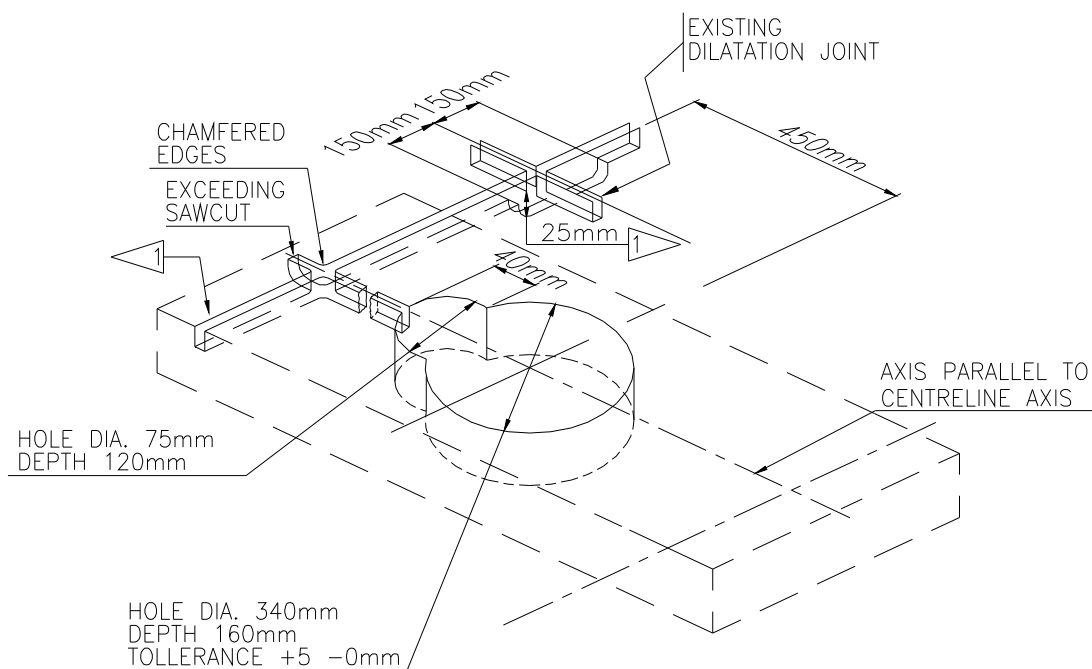


Figure 9 – Pavement Boring, Sawcutting and Joint Intersection Details

Make sure the recess size and depth are maintained within the specified limits. All surfaces of the recess must be clean and dry. If any of these surfaces is damp, it is desirable that it be dried and blown clean with a compressed air blast. The recess side walls must be perpendicular to the pavement surface. The bottom surface must be flat or slightly concave to assure that the shallow base rest securely and in true position. The recess can best be drilled using a diamond-faced core drill in a sturdy, stable drill rig.

Mark on the pavement surface the aiming direction of the light by chalk, nails or other devices.

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

3.1.1 Scheme of Light Configurations

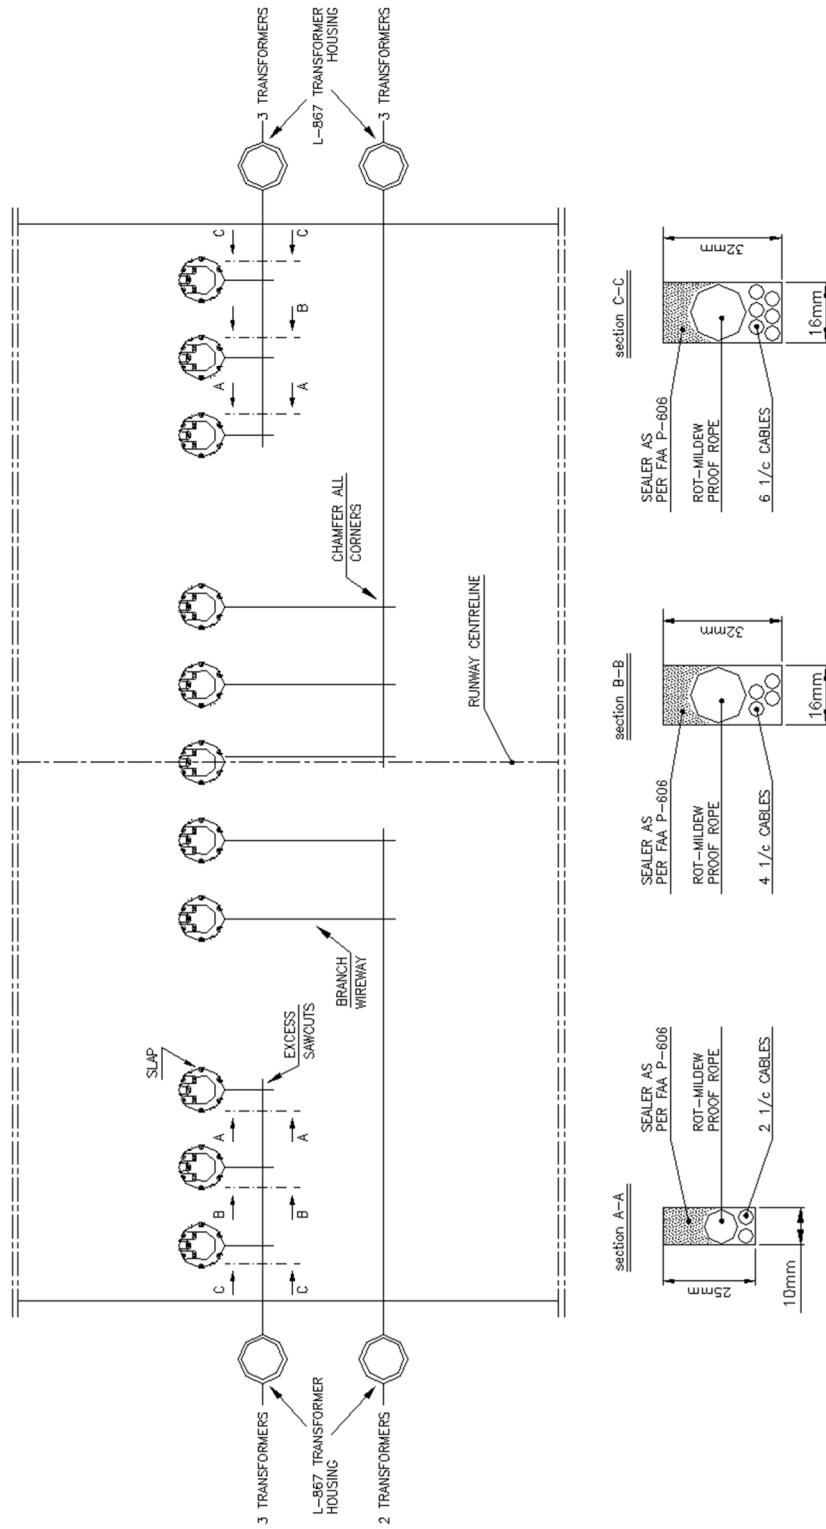


Figure 10 – Example of Light Unit Configuration

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE


3.2 INSTALLING THE SHALLOW BASE

Two different installations are possible:

- Method “A” – cable leads to be laid in wireways
- ▣ Method “B” – cable leads to be laid in cable ducts (

Figure 12)

Proceed as follow to realize a proper installation.

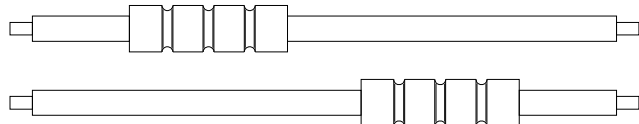STEP	A	B	ACTIVITY DESCRIPTION
1	•	▣	Take the base from the shipping box.
2	•	▣	To assure an adequate bond between base and hole all external surfaces of the base should be sandblasted and must be cleaned with solvent. TAKE CARE NOT TO DAMAGE THE ELECTRICAL SYSTEM.
3	•	/	Connect an insulated G/Y grounding wire of suitable length to the grounding screw externally provided on the wall of the base.
4	•	/	Splice the light base leads to the power cables using solderless squeeze connectors, as shown in the figure, crimped with the proper tool. Connect also the grounding wire to the main grounding network by using a suitable clamping lug.  ATTENTION: Insulate each splice carefully using either heat shrinkable insulating tubing properly applied or at least three layers of plastic electrical insulating tape applied with half overlap.
5	•	▣	<u>Mount the positioning jig (P/N 332.4301) on the base as shown in Figure 13.</u> <u>An optical device for proper fixture orientation is available (P/N 332.4351 Figure 14).</u>
6	•	/	Properly arrange the leads in the wireways using small pieces of insulating tape if necessary.
7	•	▣	Completely cover the bottom of the base with sealer material, apply a thin coat of sealer to the bottom of the drilled hole to assure a bond between the bottom of the light base and the drilled hole. It may be necessary to place temporary plugs so as to block the wireways entrances into the drilled hole

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

STEP	A	B	ACTIVITY DESCRIPTION
			<p>(METHOD "A") or the cable ducts entrance (METHOD "B"). The plugs will retain the sealer while it begins to dry up.</p> <p>ATTENTION: avoid starting the installation when the ambient temperature is below 10°C (86°F), unless the sealer used is designed to dry up at a lower temperature.</p>
8	•	▣	<p>Push the base into the recess until its upper side is at the level of the pavement surface; take care no sealer flowing inside the base. Align the notch of the base with the markings on the pavement surface.</p>
9	•	/	<p>Observing the circular level fixed on the jig, level the jig by operating the three leveling lobe knobs (Figure 13). If necessary, a weight may be placed on the jig to hold the light base in position.</p> <p>The remainder of the space between the sides of the shallow base and the drilled hole should be filled with sealer up to approx 25 mm from the pavement, according to the local needs.</p> <p>Fill the remaining 25 mm with a suitable joint sealing filler.</p>
10	/	▣	<p>Observing the circular level fixed on the jig, level the jig by operating the three leveling lobe knobs (Figure 13). If necessary, a weight may be placed on the jig to hold the light base in position.</p> <p>When the shallow base is in its final position, the conduit(s) must be properly jointed to the hole(s) provided on the shallow base. This(these) hole(s) can be provided either on the wall either on the bottom, the number and the dimensions according to customer requirements (Figure 12).</p> <p>The remainder of the space between the sides of the shallow base and the drilled hole should be filled with sealer up to approx 25 mm from the pavement, according to the local needs.</p> <p>Fill the remaining 25 mm with a suitable joint sealing filler.</p>
11	/	▣	<p>Lay the secondary power cable, equipped with a suitable two-pole receptacle kit, and the grounding wire inside the cable duct.</p>

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

STEP	A	B	ACTIVITY DESCRIPTION
12	•	□	<p>To install the fixture place the O-Ring around the dome (Figure 11- n°1) and between fixture and base (Figure 11- n°2).</p> <p>Connect the plug and the grounding wire of the fixture with the receptacle and the grounding wire of the base; press the fixture by hand onto the base and secure it using the six locking screws complete with washer, one drop of screw paste (e.g. Dow Corning Molycote 1000) should be applied to the screws before installation.</p> <p>Tightening torque is 35 Nm.</p> <p>ATTENTION: The fixture is subject to mechanical damage and/or optical misalignment if not properly seated on the base flange.</p>



Figure 11 – Gaskets for 12” shallow base

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE


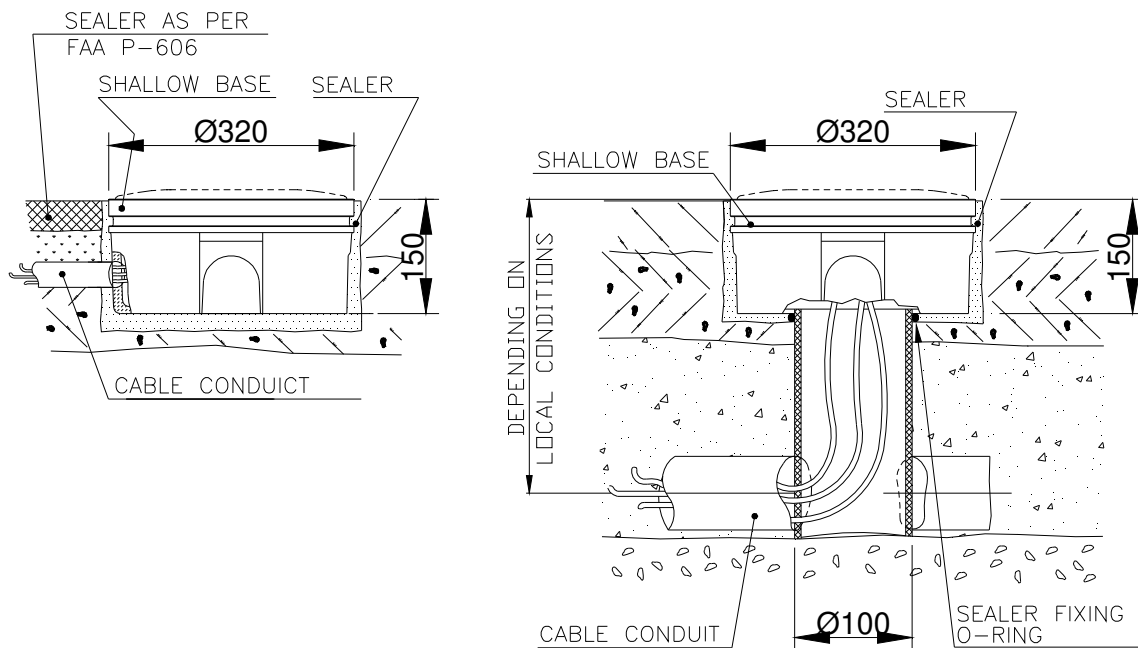


Figure 12 – 12" shallow base for side or bottom ducts (method "B")

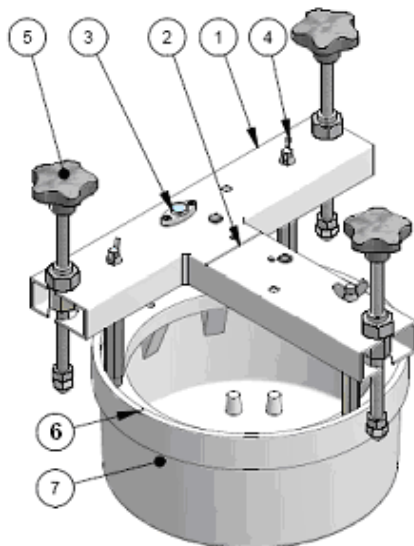


1. Positioning jig
2. Align the jig notch with the mark on the pavement
3. Circular level
4. Screws and spacers for the jig mounting
5. Lobe knob for positioning jig levelling
6. Shallow base notches aligned with the notch on the jig
7. 12" shallow base

Figure 13 – Shallow base installation details

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

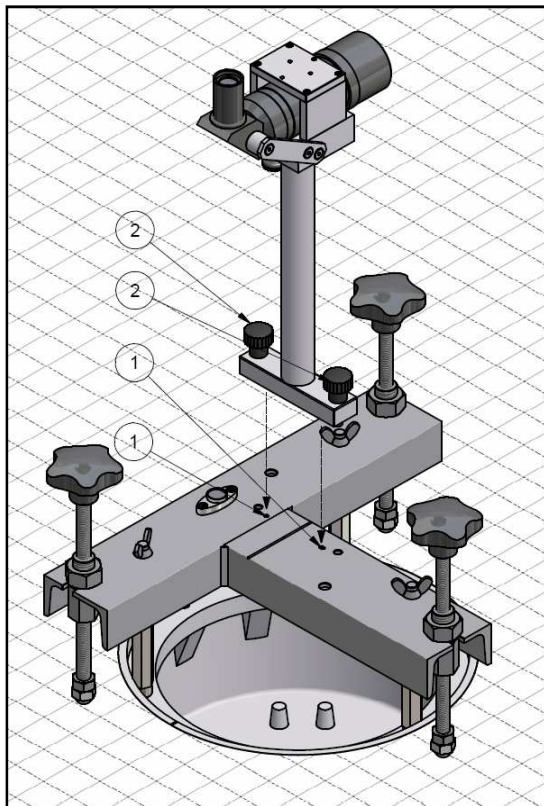

1. Positioning jig holes for optical device reference pins
2. Fixing knobs

Figure 14 – Optical device (refer to the manual UT-MT-0485 for further information)

3.3 INSTALLING THE LIGHT UNIT ON L-868 BASE, SIZE B

Install L-868 light base in compliance with FAA AC 150/5340-30.

The fixture is shipped complete (including the lamps) and is ready for installation as received, in case of 8" fixture it shall be complete of adaptor ring.

Be sure the flange on the transformer housing is clean and the O-Ring (Figure 15 – n°2), if used, is in place in the O-Ring groove.


Connect the plug of the fixture to the receptacle of the isolating transformer inside the deep base. Connect the grounding wire of the fixture to the grounding wire of the deep base (faston connection). Then press the fixture firmly and evenly by hand onto the base flange. Secure the fixture to the base by using the six locking screws complete with washers, supplied with the base. One drop of anaerobic adhesive, medium type (e.g. Loctite 243) should be applied to the screws before installation; tightening torque is 25 Nm.

The fixture is subject to optical misalignment and/or mechanical damage if not properly seated.

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

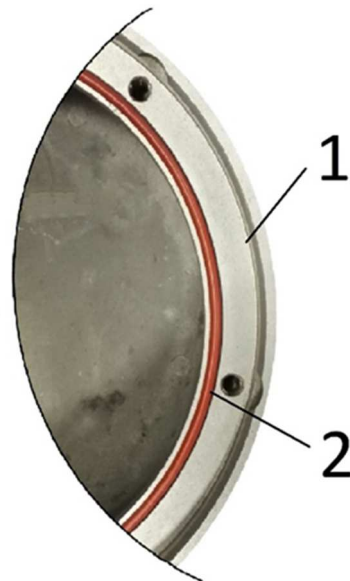

1. L-868 base
2. O-Ring between fixture and base

Figure 15 – Gaskets for L-868 base

3.4 SECONDARY WIRING

The IEC 61823 International Standard (AGL series transformers) states at para. 4.6 that “if an earthing connection is provided, it shall be connected to the larger socket of the transformer secondary connector.”

This means that, when a fixture is directly connected to the relevant isolation transformer (provided with earthing connection), the fixture secondary side is wired to the grounding network through the larger pin of fixture plug.

In case of an inset fixture, installed in the taxiway/runway pavement on its shallow base far from the relevant isolation transformer, it is necessary to provide a secondary extension between fixture and transformer. To help the installer to identify the larger socket of the female connector inside the base (when installed), the base secondary cable leads are identified by a colour code: the grey wire is wired to the larger socket, the black wire to the other one. In this way it will be easy to assure the earthing wiring, above described, between the larger socket of the transformer secondary connector and the larger pin of the fixture plug.

4 MAINTENANCE

WARNING
BEFORE ANY MAINTENANCE INTERVENTION, MAKE SURE
THE POWER SUPPLY BE SWITCHED OFF.

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

DO NOT OPERATE ON LIVE PARTS!!!

LED lighting fixtures do not require frequent maintenance. With well-run installations and handling fixture carefully, avoiding excessive falls or collisions, the only maintenance work to be carried out on the field is to clean the prisms.

4.1 MAINTENANCE PROGRAM

In order to ensure maximum light fixture life, the installed units should be subject to a maintenance program in accordance with the following instructions and taking as reference the Airport Service Manual ICAO - Part 9 - Airport Maintenance Practices or FAA AC 150 5340-30.

4.1.1 Periodical Checks

Weekly	Cleaning of the prisms and the light output channel of runway fixtures
Bi-monthly	Cleaning of the prisms and the light output channel of taxiway fixtures
Annually	Check for burned-out led
	Check for moisture inside the fixture
	STABILITY OF THE CIVIL WORKS OF RUNWAY FIXTURES
Unscheduled	Check for water in base
	ELECTRICAL CONNECTIONS AND INSULATION DEGREE
	LEAKAGE TEST
	Condition of all gaskets
	Check torque of mounting bolts after a month of their first installation
	Remove snow from around fixtures
	Check wires in saw kerfs

4.1.2 Snowplow Operations

Snowplow operators should exercise extra care not to strike the light fixtures with snowplow blades. After snow removal operations, inspect all light fixtures to locate and replace, if necessary, any damaged light assemblies.

Passes over the light rows should be made with a power broom only if practical. Whenever snowplows must traverse in-pavement light fixtures, they should be either travelling at less than 10 km/h or have the blades lifted clear of the fixtures. Recommended snow removal techniques are described in Airport Service Manual ICAO - Part 9 - Airport Maintenance Practices or FAA AC 150/5200-30.

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

4.2 REMOVING AND OPENING THE LIGHT UNIT FROM THE BASE

4.2.1 Removing the fixture

- Remove the fixture from the base, after switching off, by unscrewing the six locking screws complete with washers.
- Raise the fixture by using the two lifting tools (P/N 332.4140 or 332.4230) inserted in the suitable slots provided on the dome. As an alternative, two screwdrivers can be used.
- Disconnect the fixture plug/s and grounding cable from those inside the shallow base.

4.2.2 Opening the fixture

- Unscrew the leak valve cap and push the valve central pin, in this way the light internal pressure is the same of the atmospheric pressure.
- Open the fixture by unscrewing the six locking screws HSFH M5x10 (Figure 16 - n°1).

Every time the fixture is opened, inspect the following parts and replace them if necessary:


- prism, if it is dirty or damaged
- prism gasket, check the integrity
- cable lead with plug

4.2.3 Closing the fixture

Every time the fixture is opened **replace** the following items with a new ones:

- six locking screws HSFH M5x10 (Figure 16 - n°1);
- O-Rings between dome and lower cover (Figure 18 – n°2 and 3);

Verify the correct position of the two O-Ring between dome and lower cover (Figure 18 – n°2 and 3); mount the lower cover on the dome and fasten it by means the six screws HSFH M5x10 (Figure 16 - n°1). One drop of anaerobic adhesive lower type (e.g. LOXEAL 24-18) should be applied to the screws before installation; tightening torque is 2.5 Nm.

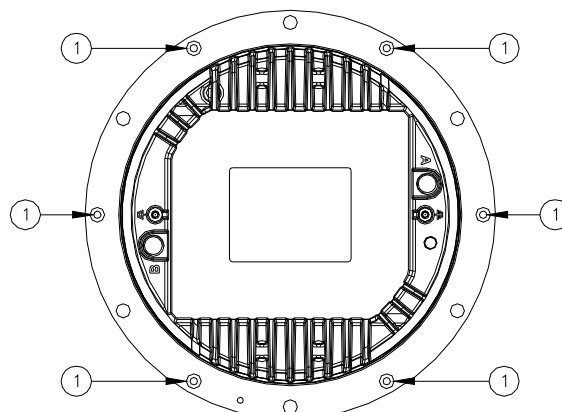

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

Figure 16 - Lower Cover Fixing Screws

4.2.4 Leakage test

The assembly should be given a 1.38 kPa air pressure test. This can be done by connecting an external air pressure line to the valve (Figure 17– n°2) provided on the lower cover. Immerse the assembly under water, so air loss will be easily viewed if some part is damaged or assembling is wrong.

If there is no air loss then test is passed successfully.

Light unit is ready to be field installed.


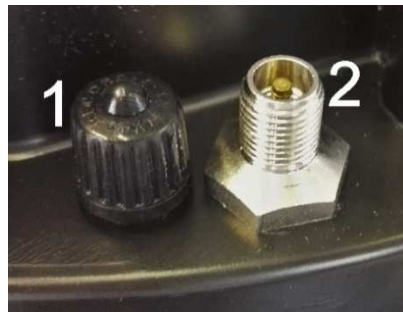


Figure 17 - Lower Cover with Pressure Valve

4.2.5 Reinstalling the fixture

Every time the fixture is removed from the base **replace** the following items with a new ones making sure that are right placed in the relevant groove:

- the six special seal lock washers;
- O-Ring around the dome (Figure 18 – n°4);
- O-Ring between fixture and shallow base (Figure 18 – n°7);
- The fixture is ready to be field installed.

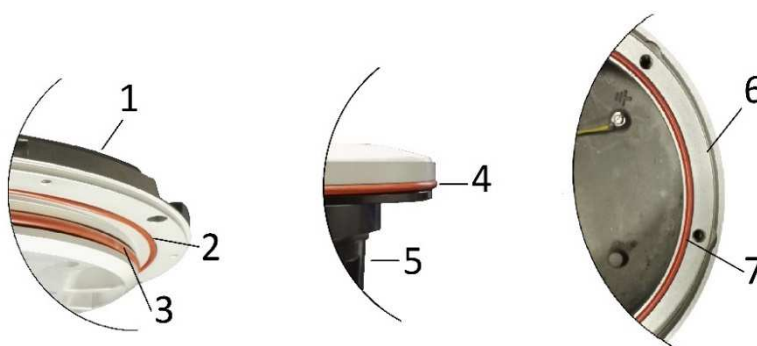

1. Dome
2. O-Ring between dome and lower cover
3. O-Ring between dome and lower cover
4. O-Ring around the dome
5. Lower Cover
6. 12" Shallow base
7. O-Ring between fixture and 12" Shallow base

Figure 18 – Fixture Gaskets

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

4.3 PRIMS CLEANING

4.3.1 Prism outside cleaning

- Removing the fixture is not necessary to clean the outer surface of the prisms, and if already removed is not necessary to open it. Clean the prisms surface with non abrasive glass product.

4.3.2 Prism inside cleaning

Normally the cleaning of the prism inside surfaces is not necessary because fixture is watertight. Whenever it is necessary, remember the following rules.

Remove the fixture from the base and open it following instructions of *“Removing and Opening the Light Unit From the Base”* and proceed as follows:

- clean the prisms surfaces (Figure 19) with non abrasive glass product
- dry them carefully
- reassembly the light unit following instructions of paragraph *“Closing the Fixture”*, *“Leakage Test”* and *“Reinstalling the fixture”*.



Figure 19 - Prism Cleaning

4.4 PRISM REPLACEMENT

If the prism is damaged it must be replaced as described below.

It is highly recommended to do a complete overhaul of the fixture. Contact OCEM - ENERGY TECHNOLOGY for any suggestion.

4.4.1 Removing the Prism

Remove the fixture from the base and open it following instructions of *“Removing and Opening the Light Unit From the Base”*.

Clean out possible pieces of the old prism and all accumulated debris from the inside. Unscrew the two screws HSCS M5x12 (Figure 20- n°6) and remove the mounting plate (Figure 20 - n°5). Then remove the old prism and the gasket, carefully clean the prism seat by scraping and taking care not to damage the relevant walls.

4.4.2 Installing the New Prism

Edition 04/02/2019

Supersedes edition 12/17/2018

**LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE**

Place a new gasket (Figure 20 - n°2) in the prism cavity on the dome, then position and press by hand the prism (Figure 20 - n°3) in the relevant seat and place a new gasket in the back side of the prism (Figure 20 - n°4).

Then fasten the mounting plate (Figure 20 – n°5) with the two relevant screws HSCS M5x12 (Figure 20 - n°6); tightening torque is 2.5 Nm. Inspect all components inside the fixture for damages or signs of corrosion. Replace all necessary components.

Close the light fixture following instructions of paragraph *“Closing the Fixture”*, *“Leakage Test”* and *“Reinstalling the fixture”*.

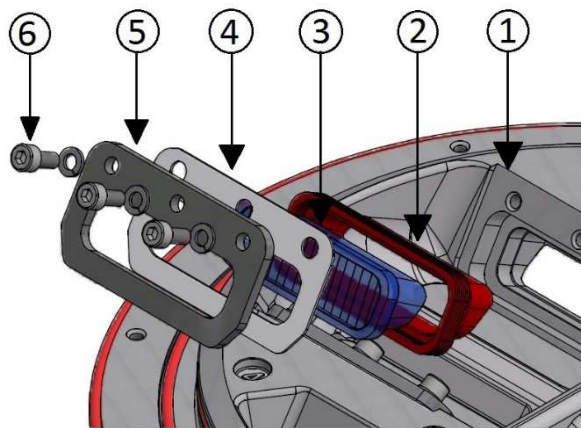


Figure 20 - Prism Replacement

4.5 LED MODULE REPLACEMENT

Remove the fixture from the base and open it following instructions of *“Removing and Opening the Light Unit From the Base”* and proceed as follow:

- disconnect the power supply connector from the LED module (Figure 21 – n°1)
- remove the LED module (Figure 21 – n°2) and the relevant lens array (Figure 21 – n°3) from the mounting plate
- replace the LED module it with a new one
- fasten the LED module and the relevant lens array with a tightening torque of 0.6 Nm
- reconnect the power supply connector (Figure 21 – n°1) to the LED module

Reassembly the fixture following instructions of paragraph *“Closing the Fixture”*, *“Leakage Test”* and *“Reinstalling the fixture”*.

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

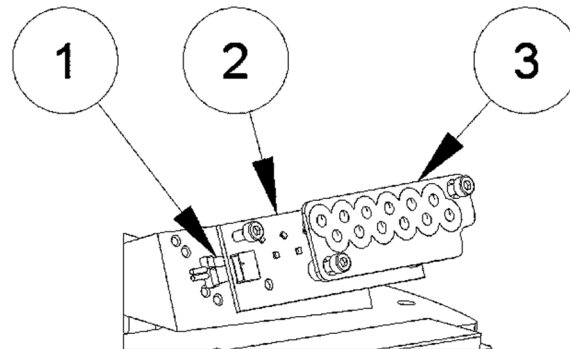


Figure 21 – LED Module Replacement

4.6 ELECTRONICS REPLACEMENT

Remove the fixture from the base and open it following instructions of *“Removing and Opening the Light Unit From the Base”* and proceed as follow:

- disconnect the power supply connector(s) from the LED module(s)
- replace the entire lower cover with a new one complete with electronic section
- reconnect the power supply connector(s) to the LED module(s)

Reassembly the fixture following instructions of paragraph *“Closing the Fixture”*, *“Leakage Test”* and *“Reinstalling the fixture”*.

4.7 GASKETS

4.7.1 Gasket examination

Every time a fixture is opened each O-Ring must be examined as described below and **replaced** if necessary.

Any O-Ring that is stretched, torn, has a permanent set or some other defect, which would prevent it from obtaining a water-tight seal **must be replaced with a new O-Ring**.

Remove the fixture from the base and open it following instructions of *“Removing and Opening the Light Unit From the Base”*.


Light assembly is equipped with the following gaskets:

- two O-Ring between dome and lower cover (Figure 22- n°2 and 3);
- O-Ring around the dome (Figure 22- n°3);
- O-Ring between fixture and 12” shallow base (Figure 22- n°7);
- prism gasket mounted between prism and dome (Figure 23- n°2).

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

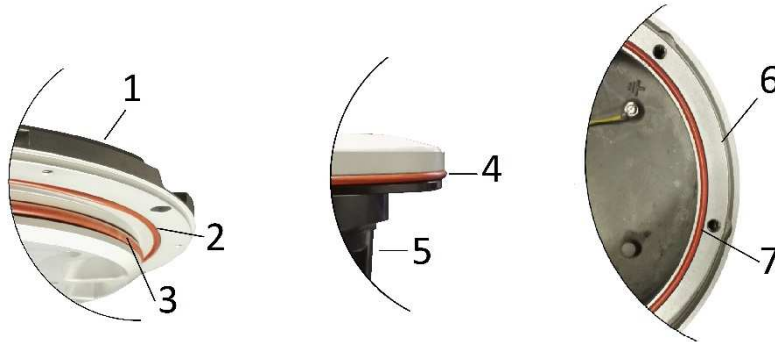

1. Dome
2. O-Ring between dome and lower cover
3. O-Ring between dome and lower cover
4. O-Ring around the dome
5. Lower Cover
6. 12" Shallow base
7. O-Ring between fixture and 12" Shallow base

Figure 22– Fixture Gaskets

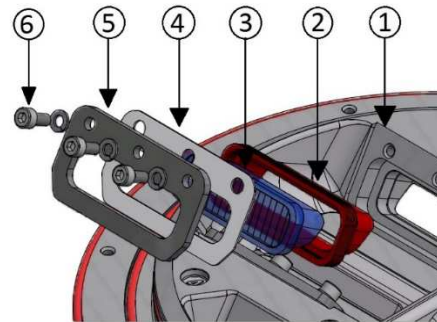


Figure 23 – Prism Gasket

4.7.2 O-Ring replacement

Remove the old O-Ring from the groove and clean the flange mating surfaces and the groove, scraping carefully. Take care not to damage the mating surface and the bottom and sides of the groove. Position it in the centre of its groove and push it inside.

NOTE 1: Make sure that the proper O-Ring is re-inserted into the groove.

NOTE 2: The seat of an O-Ring gasket is dimensioned to allow the proper positioning when compressed between the mating surfaces. Screws properly tightened are important in obtaining a complete seal.

TIGHTENING TORQUE	
lower cover TORX SFH M5x16	2.5 Nm
fixture locking screw	35 Nm (for shallow base)
	35 Nm (for L-868 base, size B)

4.8 CABLE LEAD WITH PLUG

4.8.1 Removing the cable lead with plug

Remove the fixture from the base and open it following instructions of “Removing and Opening the Light Unit From the Base”.

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

Inside the lower cover, disconnect the pair of wires from the electronics by cutting the cables, unscrew the gland and pull out the cable lead with gland gasket.

4.8.2 Installing the new cable lead with plug

Insert the gland nut on the new unipolar cable lead so that the length of the cable outside the fixture is 46cm (Figure 24– n° 2).

Splice the ends of the cables for a length of approx. 7mm (Figure 24– n° 3).

Tighten the gland nut at 6Nm.

Restore the electrical connections by faston terminals.

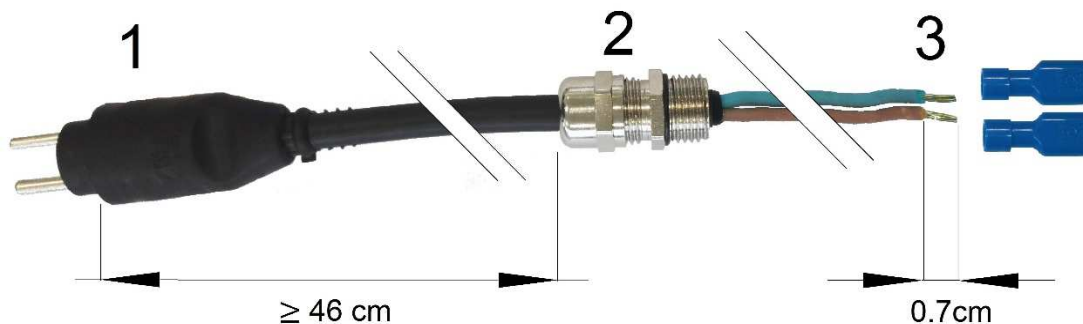


Figure 24 - Cable Lead With Plug

Close the light fixture following instructions of paragraph “Closing the Fixture”, “Leakage Test” and “Reinstalling the fixture”.

4.9 PRESSURE VALVE

If a leakage is found through the pressure valve during an air pressure test, check carefully where the leakage happens. If the leakage is between the valve (Figure 25 - n°2) and the lower cover (Figure 25 - n°1), check the tightening of the valve body to the lower cover from the outside of the fixture.

In case the pressure valve needs replacing operate as follows, considering the fixture already opened following instructions of “Removing and Opening the Light Unit From the Base”. Unscrew the valve body with gasket from the outside of the lower cover (Figure 25 - n°1) by clamping the hexagonal end section of the valve body. Screw the new valve on the lower cover; tightening torque is 0.35 Nm. Check the valve core (Figure 25 - n°4) is tightened to the valve body (Figure 25 - n°2) and then screw its cap (Figure 25 - n°3).

Reassembly the light unit following instructions of paragraph “Closing the Fixture”, “Leakage Test” and “Reinstalling the fixture”.

Edition 04/02/2019

Supersedes edition 12/17/2018

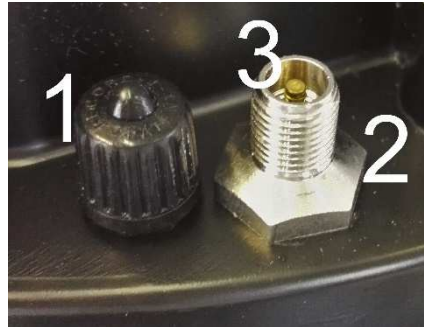
LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

Figure 25 - Lower Cover with Pressure Valve

4.10 CLEANING

Service life depends upon the entire assembly being waterproof. All surfaces must be clean, dry and free of all foreign matter if the light fixture is to operate for an extended period without requiring maintenance.

4.11 MONITORING

The fixtures can be provided with the option of monitoring. This device allows to show at the constant current regulator as if the fixture circuit was open when a LED burns out. The fixture thus acts as a traditional lamp fixture.

When the fixture has a bad operation, the internal monitoring device disconnects definitively the fixture from the series circuit; after this operation to restore the normal operation of the fixture it's necessary to replace the LED board and unlock the monitoring device. For this operation it is necessary to follow these steps:

- remove the fixture from the base and open it following instructions of *“Removing and Opening the Light Unit From the Base”*
- replace the LED module following instructions of *“LED Module Replacement”*

restore the condition of proper functioning of the monitoring device as shown in

- Figure 26

Reassembly the fixture following instructions of paragraph *“Closing the Fixture”*, *“Leakage Test”* and *“Reinstalling the fixture”*.

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

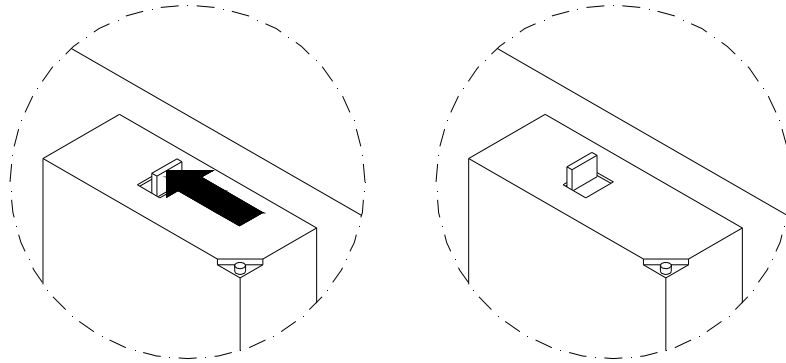


Figure 26 - Restoring the Monitoring Device

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

5 TROUBLESHOOTING

Problem	Possible cause	Solution
Distorted light beam output	Broken or damaged prism	Replace prism
	Wrong prism installed	CHECK PARTS LIST AND INSTALL THE CORRECT PRISM
Weak light output	Primary loop with partial short circuit	Check cable assembly
	Defect in the isolation transformer	Replace transformer
	Dirty prism or dome	Clean the light fixture
	One LED of the luminous source damaged in short circuit (only without the monitoring option)	Replace the LEDs board
	Wrong power PCB installed	Check parts list and install the correct PCB
Luminous source not working	LEDS DEFECTIVE	Replace the LEDs board
	POWER PCB DEFECTIVE	Replace the Power PCB
	Moisture inside the fixture	Execute leakage test and replace damaged components. Clean and dry the inside area of the fixture
	No connection of primary circuit	Check transformer output current with A-meter
	Defective isolation transformer or secondary wiring	Check power line between the light fixture and the transformer, including connectors
	Monitoring device locked (only if this option)	Unlocked monitoring device
Water or moisture inside the fixture	Prism gasket, O-rings between dome and lower cover	Replace all gasket and execute leakage test
	Pinched fixture power cables	Replace fixture leads

Edition 04/02/2019

Supersedes edition 12/17/2018

LED INSET APPROACH LIGHT LIRA
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE**6 SPARE PARTS**

CODE	DESCRIPTION
RISL20001	Kit Mounting Gasket
RISL20002	Kit Prism with gasket
RISL20013	Unidirectional Dome
RISL20031	Module LED F305 RED with lens
RISL20032	Module LED F281 WHITE with lens
RISL20050	Lower cover 12" 1I/1+1O with monitoring
RISL20051	Lower cover 12" 1I/1+1O without monitoring
RISLX0002	Pressure valve
RISLX0003	Grease for O-Ring gaskets (400 gr)
RISLX0004	Screws and O-Ring gasket for fixture fixing on base
RISLX0006	Unipolar power supply cable lead with plug L=0.6 m
RISLX0007	Anaerobic adhesive for fillets
RISLX0008	L-823 cable with gland nut for shallow bases