

Supersedes edition 05/07/2017



## LED INSET HELIPORT LIGHT

LHI

# INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

Compiled by: Nicola Marabini

Approved by: Piero Scaramagli

N° Attachments: 1

Copy n°:

Edition 08/01/2019

Supersedes edition 05/07/2017

LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

### **LIMITED PRODUCT WARRANTY**

THE FOLLOWING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT BY WAY OF LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.

OCEM - ENERGY TECHNOLOGY warrants to each original Buyer of Products manufactured by the Company that such Products are at the time of delivery to the Buyer, free of material and workmanship defects, provided that no warranty is made with respect to:

- (a) any Product, which has been repaired or altered in such a way, in Company's judgement, as to affect the Product adversely;
  - (b) any Product which has, in Company's judgement, been subject to negligence, accident or improper storage;
  - (c) any Product which has not been operated and maintained in accordance with normal practice and in conformity with recommendations and published specification of Company;
  - (d) the breaking of the warranty seals, if present, determines the immediate termination of the warranty;
- and,

OCEM - ENERGY TECHNOLOGY's obligation under this warranty is limited to use reasonable efforts to repair or, at its option, replace, during normal working hours at the facility of the Company, any Product which in its judgement proved not to be as warranted within the applicable warranty period. All costs of transportation of Products claimed not to be warranted and of those repaired or replaced, to or from the facility of the Company shall be borne by Purchaser. Company may require the return of any Product claimed not to be as warranted to its facility, transportation prepaid by Purchaser, to establish a claim under this warranty. The cost of labour for the installation of a repaired or replaced Product shall be borne by Purchaser. Replacement parts provided under the terms of this warranty are warranted for the remainder of the warranty period of the Products upon which they are installed to the same extent as if such parts were original components thereof. Warranty services provided under the Agreement do not assure uninterrupted operations of Products; Company does not assume any liability for damages caused by any delays involving warranty service.

#### **IMPORTANT: READ THIS DOCUMENT**

Before proceeding to the operations of installation, commissioning, operation, maintenance or disposal, carefully read the entire document.

### **SAFETY INFORMATION**

Extreme caution should be exercised when working with this equipment; it is normally used or connected to circuits that operate at dangerous voltages and can be fatal.

The following section contains important safety information that you must follow when installing and using the apparatus.

Misuse of the equipment or lack of care in applying safety procedures and prescriptions specified in this document, may result in a hazard.

Avoid contact with voltage or current sources.

For no reason the protections and the safety devices must be removed.

Edition 08/01/2019

Supersedes edition 05/07/2017

LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

#### OPERATION ON THE EQUIPMENT - SKILLS

Operation on the equipment and access to its internal parts shall be done by experienced personnel, adequately trained and aware of the risks related to electricity and high voltages. Safety rules shall be adopted when operating on the equipment, or on cables and other apparatus connected to the it

#### DO NOT OPERATE ON ENERGIZED CIRCUITS

Do not carry out any operation on the converter or on apparatus connected to it when the circuits are energized.

#### **WHEN HANDLING AND SERVICING THIS EQUIPMENT, OBSERVE PRECAUTIONS FOR HIGH VOLTAGE EQUIPMENT.**

Before any access, inspection or intervention, be sure to have switched-off the unit, opened the main circuit breaker and removed the supply to the unit (by opening the circuit breaker/switch on the distribution board at the beginning of the supply line).

Then wait discharge time (at least 5 minutes), ground carefully the system, and check for voltage presence before accessing..

#### REANIMATION

The maintenance staff must be aware of the risks related to electricity, criteria to prevent the risk of electric shock and resuscitation techniques

#### CE MARK



This equipment complies with the requirements of European regulations for the CE mark. The user has to respect all prescriptions reported in this document.

This equipment complies with the requirements of the EEC directives 2004/108/EEC and 2006/95/EEC with regard to "Electromagnetic Compatibility" and "Low Voltage Electrical Apparatus" respectively.

#### OUT OF SERVICE

In case of dismantling, decommissioning, destruction, disposal, the user shall follow all the required precautions for component and material elimination, according to local rules and applicable law.

Edition 08/01/2019

Supersedes edition 05/07/2017

LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

### EDITIONS

**Date**

06/22/2012	First issue
10/25/2013	Power consumption updating
11/03/2014	New address of the Company General revision Deleted § "List of the recommended spare parts" and added relevant attachment
09/01/2019	Added monitoring and cage options

### REVISIONS

<b>Index</b>	<b>Date</b>	<b>Description</b>	<b>Edited by</b>	<b>Approved by</b>
--------------	-------------	--------------------	------------------	--------------------

### LIST OF EFFECTIVE PAGES

From page 1 to page 31

**INDEX**

LIMITED PRODUCT WARRANTY.....	2
SAFETY INFORMATION .....	2
EDITIONS .....	4
REVISIONS.....	4
LIST OF EFFECTIVE PAGES.....	4
INDEX.....	5
INDEX OF FIGURES.....	6
LIST OF ATTACHMENTS .....	6
<b>1 GENERAL.....</b>	<b>7</b>
<b>2 MAIN FEATURES .....</b>	<b>7</b>
2.1 REMOVABLE LIGHT UNIT.....	7
2.1.1 Dome.....	7
2.1.2 Optical Assembly.....	8
2.1.3 Power Supply/Control Board .....	8
2.1.4 Lower Cover .....	8
2.2 SHALLOW BASE .....	13
<b>3 INSTALLATION .....</b>	<b>15</b>
3.1 PAVEMENT BORING AND SAWCUTTING.....	15
3.2 INSTALLING THE SHALLOW BASE .....	16
3.3 SECONDARY WIRING .....	22
<b>4 MAINTENANCE .....</b>	<b>22</b>
4.1 REMOVING AND OPENING THE LIGHT UNIT FROM THE BASE .....	22
4.1.1 Removing the fixture .....	22
4.1.2 Opening the fixture.....	23
4.1.3 How to Access Lens Assembly .....	23
4.1.4 Closing the fixture .....	23
4.1.5 Leakage test .....	24
4.1.6 Reinstalling the fixture.....	24
4.2 LENS CLEANING .....	25
4.2.1 Lens outside cleaning.....	25
4.2.2 Lens inside cleaning .....	25
4.3 LENS REPLACEMENT.....	26
4.3.1 Removing the Lens.....	26
4.3.2 Installing the New Lens .....	26
4.4 LED MODULE REPLACEMENT .....	27
4.5 ELECTRONICS REPLACEMENT .....	27
4.6 GASKETS .....	28
4.6.1 Gasket examination .....	28
4.6.2 O-Ring replacement .....	29
4.7 CABLE LEAD WITH PLUG.....	29

Edition 08/01/2019

Supersedes edition 05/07/2017

LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

4.7.1	Removing the cable lead with plug.....	29
4.7.2	Installing the new cable lead with plug .....	30
4.8	PRESSURE VALVE .....	30
<b>5</b>	<b>TROUBLESHOOTING .....</b>	<b>31</b>

**INDEX OF FIGURES**

Figure 1 – 8” Dome outside view .....	8
Figure 2 – Lower Cover Outside View .....	9
Figure 3 – Lower Cover Inside View .....	9
Figure 4 – Wiring Diagram.....	10
Figure 5 – Exploded View .....	11
Figure 6 – Part List .....	12
Figure 7 - Complete P/N identification.....	12
Figure 8 – Gasket of 8” fixture for 8” shallow base.....	14
Figure 9 – Standard 8“-12” shallow base .....	14
Figure 10 – Pavement Boring, Sawcutting and Joint Intersection Details .....	15
Figure 11 – Gaskets for 8” shallow base .....	18
Figure 12 – Gaskets for 12” shallow base .....	19
Figure 13 – 8” shallow base for side or bottom ducts (method “B”).....	20
Figure 14 – 12” shallow base for side or bottom ducts (method “B”).....	20
Figure 15 – Shallow base installation details .....	21
Figure 16 – Optical device (refer to the manual UT-MT-0485 for further information) .....	21
Figure 17 – Removing the Aluminium Ring .....	23
Figure 18 - Lower Cover Fixing Screws .....	24
Figure 19 - Lower Cover with Pressure Valve.....	24
Figure 20 – Fixture Gaskets .....	25
Figure 21 – Lens Surface to be Cleaned .....	26
Figure 22 - Lens Replacement .....	27
Figure 23 - LED Module Replacement .....	27
Figure 24– Fixture Gaskets .....	28
Figure 25 – Lens Gasket.....	29
Figure 26 - Cable Lead With Plug.....	30
Figure 27 - Lower Cover with Pressure Valve.....	31

**LIST OF ATTACHMENTS**

UC-PU-0282 - LIST OF THE RECOMMENDED SPARE PARTS

Edition 08/01/2019

Supersedes edition 05/07/2017

LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

## 1 GENERAL

---

LHI inset LED heliports light is low intensity, omnidirectional, 8" steady burning type.

These fixtures are intended for use as helipad area lighting.

LHI lights are in compliance with ICAO Annex 14 Vol.2, IEC TS 61827 (Style 4) and NATO-STANAG 3619.

The fixtures described in this manual are designed to be connected to series circuit or parallel circuits.

Location of these fittings shall be in compliance with ICAO - Annex 14 or STANAG Specs

## 2 MAIN FEATURES

---

Each light assembly consists of a removable fixture and a shallow base receptacle. The fixture is waterproof and designed to withstand aircraft impact and roll-over loads without damage.

On request a suitable adaptor ring (base mounted) is available to allow the installation on shallow base, 12" diameter, or on deep base, type L-868, size B, as per FAA AC 150/5345-42, thereby permitting replacement of any inset fixture without removing the deep base from the pavement.

Power consumption 20 or 12 VA (series circuits white or green/yellow respectively) and 42 or 21 VA (parallel circuits white or green/yellow respectively).

### 2.1 REMOVABLE LIGHT UNIT

---

The removable fixture mainly consists of a dome, an optical assembly and a lower cover.

#### 2.1.1 Dome

The dome is made of treated drop-forged aluminium and includes one cavity to seat the lens, complete with gasket, kept in the proper position by means of an aluminium ring fixed with HSCS M5x16 screws.


The dome is provided with two through holes for fastening the light unit to the base and two dead holes for matching two studs mounted on the base, so to prevent the rotation of the light unit due to aircraft wheel impact/roll over

It is also provided with two suitable slots, in opposite position, to make easy the fixture removal by using two suitable lifting tools (available on request, P/N 332.4140 or 332.4230). As alternative, two screwdrivers can be used.

A silicone O-Ring (separately supplied) has to be mounted outside around the dome, to avoid dirt deposits between dome and shallow base.

Edition 08/01/2019

Supersedes edition 05/07/2017

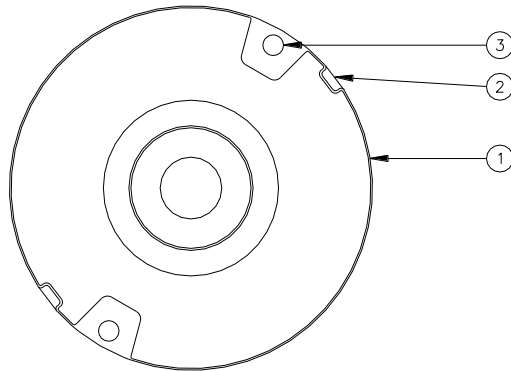LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

1. Dome
2. Slot for dome removal
3. Through hole for light unit fastening

Figure 1 – 8" Dome outside view

### 2.1.2 Optical Assembly

The **optical assembly** consists of one lens (Figure 5 - n°5) with relevant gasket (Figure 5 - n°4) and one LED module complete with collector lens (Figure 5 - n°12) kept into the proper position by its support.

LED module, complete with collector lens, consists of six LEDs mounted on a metal core PCB, coupled with the support through thermo conductive material.

All the optical assembly parts are factory assembled; they may be field-replaced if necessary.

### 2.1.3 Power Supply/Control Board

The power supply/control board is encapsulated into waterproof and heat conductive silicon resin.

The PCB powers and controls the LEDs and it's available in two versions: series circuits or voltage power supply.

### 2.1.4 Lower Cover

The **lower cover** consists of a treated aluminium casting; it is fastened to the dome by means of three screws HSFH M5x10. An O-Ring is provided between dome and lower cover.

The cover is provided with one threaded hole for cable entry and external grounding screw with yellow-green cable lead, size 2.5 mm<sup>2</sup>, 0.250 m long, with male faston terminal. A suitable valve is outside mounted for the leakage test.

Watertightness between fixture and shallow base is ensured by means of a gasket (separately supplied) to be placed on the relevant groove around the lower cover.

The fixture is supplied with one **cable lead with L-823 plug**; it consists of two single-pole teflon leads, size 2.1 mm<sup>2</sup> (#14 AWG), 0.700 m long. The plug is in compliance




LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

with FAA AC 150/5345-26 for very quick coupling with the receptacle mounted on the shallow base.

The fixture is 203 mm in diameter and 85 mm (+ 18.5 mm for plugs) high; the protrusion above the ground is less than 6.35 mm.

An identification data label is externally applied over the lower cover (Figure 2 – n°2). Moreover, to identify quickly the beam colour, the letter “A” of the dome in front of the window is painted in the same colour of the light beam.

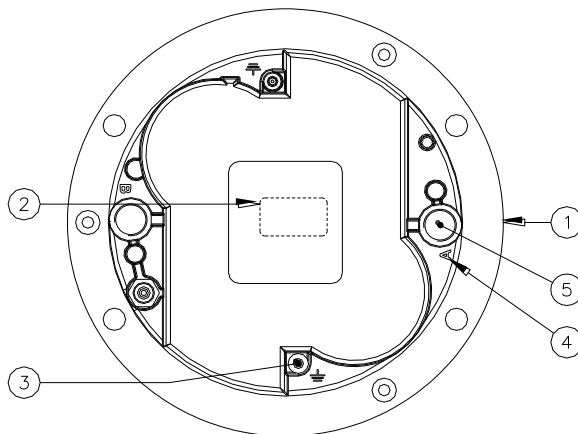


1. Lower cover
2. Identification label
3. Grounding cable hole
4. Letter “A” and “B” for cable lead identification
5. Cable lead entry

Figure 2 – Lower Cover Outside View

The same colour painting is provided outside on the lower cover.

See “Complete P/N identification” figure for P/N information.

All hardware is made of stainless steel.

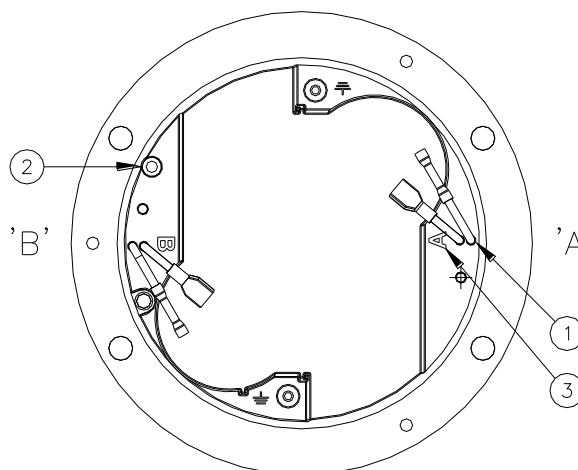


1. Cable lead with plug
2. Leak test valve
3. Letter “A” and “B” for cable lead identification

Figure 3 – Lower Cover Inside View

Edition 08/01/2019

Supersedes edition 05/07/2017

LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

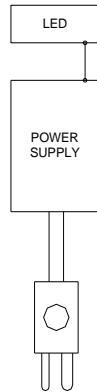

1 In 1 Out

*Figure 4 – Wiring Diagram*

Edition 08/01/2019

Supersedes edition 05/07/2017

LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

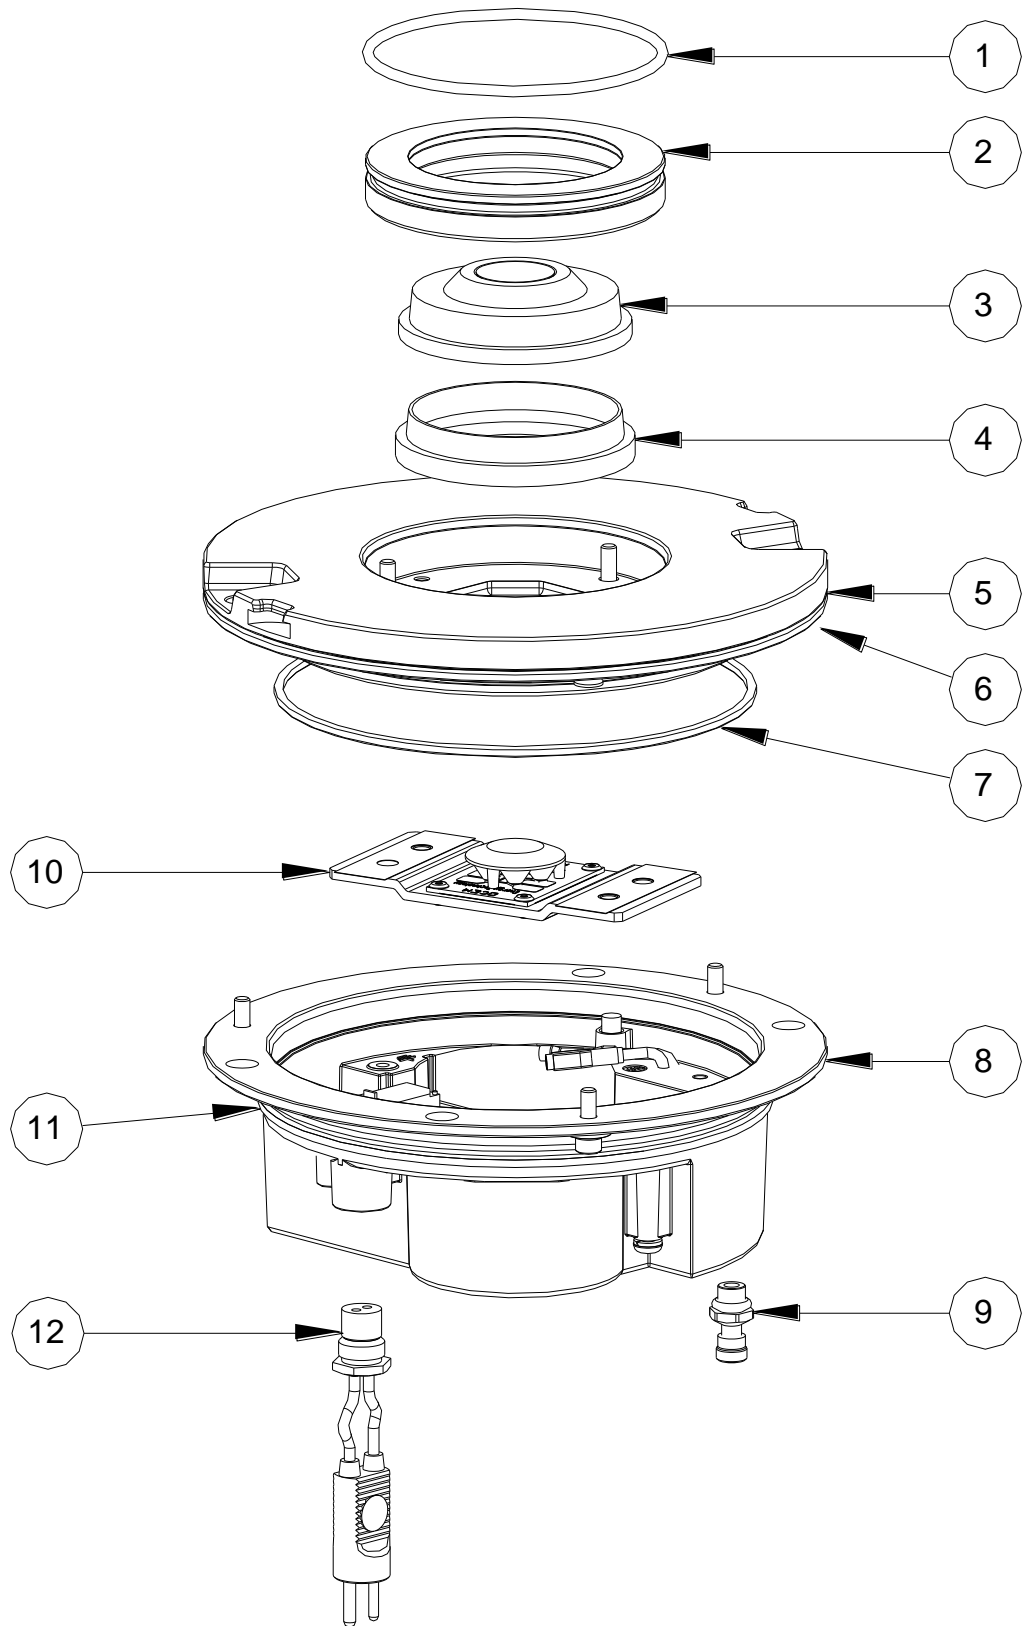


Figure 5 – Exploded View


Edition 08/01/2019

Supersedes edition 05/07/2017

LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

No.	Description	Qty
1	Aluminium lens holder .....	1
2	O-Ring for aluminium lens holder .....	1
3	Lens .....	1
4	Lens gasket .....	1
5	Dome .....	1
6	O-Ring for dome .....	1
7	O-Ring for lower cover .....	1
8	Lower cover .....	1
9	Valve for watertightness test .....	1
10	LED module with accessories .....	1
11	Lower cover gasket .....	1
12	FAA L-823 plug .....	1

Figure 6 – Part List

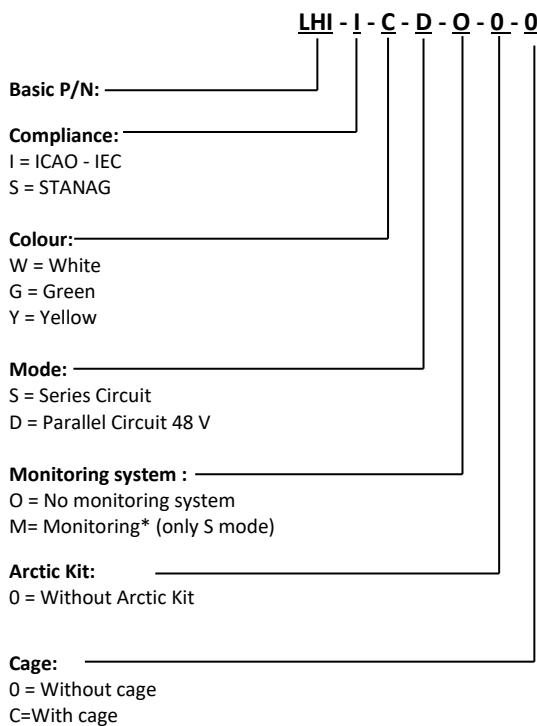

Colour Selection				
SPECS	USE	COLOUR		
		WHIT E	GREE N	YELLO W
ICAO	FATO and Aiming Point	X		
ICAO	TLOF Heliport Edge		X	
STANAG	TLOF Heliport Edge			X
STANAG	Landing Direction			X

Figure 7 - Complete P/N identification

Edition 08/01/2019

Supersedes edition 05/07/2017

LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

## 2.2 SHALLOW BASE

---

The **shallow base** (

Figure 9) consists of a treated aluminium casting containing an electrical feed-thru system to connect the power cables, consisting of one cable lead with receptacle incoming inside the base through one cable gland. The cable lead with receptacle consists of two single-pole leads, size 2.5 mm<sup>2</sup>, 1.00 m long, with FAA L-823 receptacle.

The letters "A" and "B" are printed inside the base for cable leads identification.

The base is equipped with an internal grounding screw with yellow-green cable lead, size 2.5 mm<sup>2</sup>, 0.250 m long, with female faston terminal for quick connection to the corresponding of the fixture. An additional external grounding screw is provided close to the cable entry.

The shallow base is designed for cementing in place by means of epoxy-resin in a hole drilled in the pavement.

The fixture has to be fastened to the base by means of two or six M10x30 stainless steel hex cap screws (8" or 12" shallow base resp.). If the base has American threaded holes, UNC 3/8-16 screws can be used. Each locking screw is complete with special sealed external silicon-coated lock-washer.

A gasket (separately supplied) must be placed between base and fixture for watertightness: for 8" fixtures (

Figure 8 - n°1) around the lower cover, for 12" fixtures (

Figure 9 - n°9) placed in the relevant shallow base groove.

The 12" shallow base is 320 mm in diameter and 150 mm high, while the 8" one is 214 mm in diameter and 125 mm high.

On request, special bases without cable leads can be supplied, provided with holes suitable for conduit connections.

Inside the base two suitable holders (

Figure 9 - n°7) are provided to properly sustain the secondary power cable, in case of this cable is inside incoming through a conduit.

Edition 08/01/2019

Supersedes edition 05/07/2017

LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE


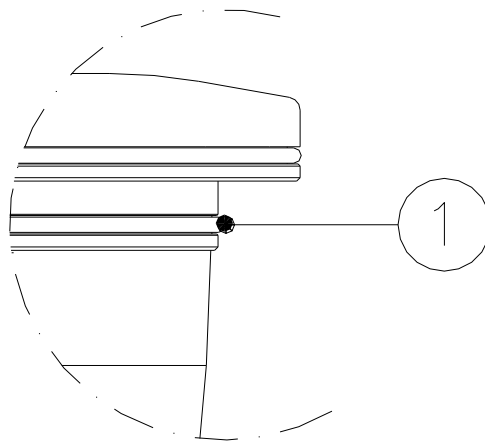


Figure 8 – Gasket of 8” fixture for 8” shallow base

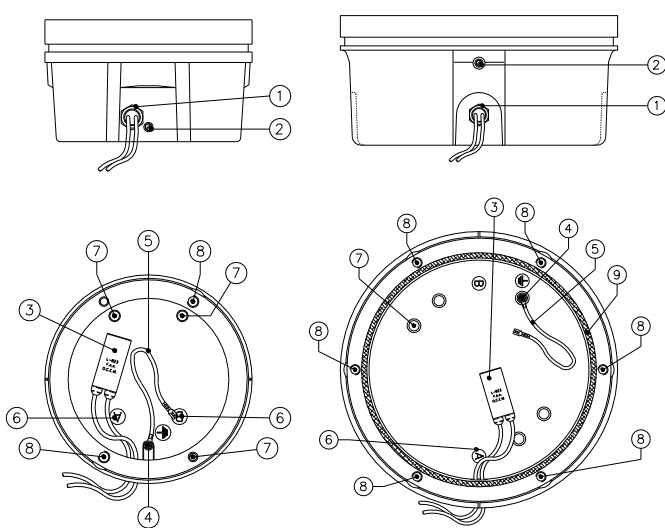

1. Cable gland for cable entry
2. External grounding screw
3. Cable leads with socket
4. Internal grounding screw
5. Grounding cable with female faston terminal
6. Letters "A" for cable lead identification
7. Power cable holders
8. Threaded holes for fixture fastening by bolts
9. O-Ring between fixture and base

Figure 9 – Standard 8"-12" shallow base

Edition 08/01/2019


Supersedes edition 05/07/2017

LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

### 3 INSTALLATION

#### 3.1 PAVEMENT BORING AND SAWCUTTING

Drill each recess in pavement following the instruction in Figure 10.

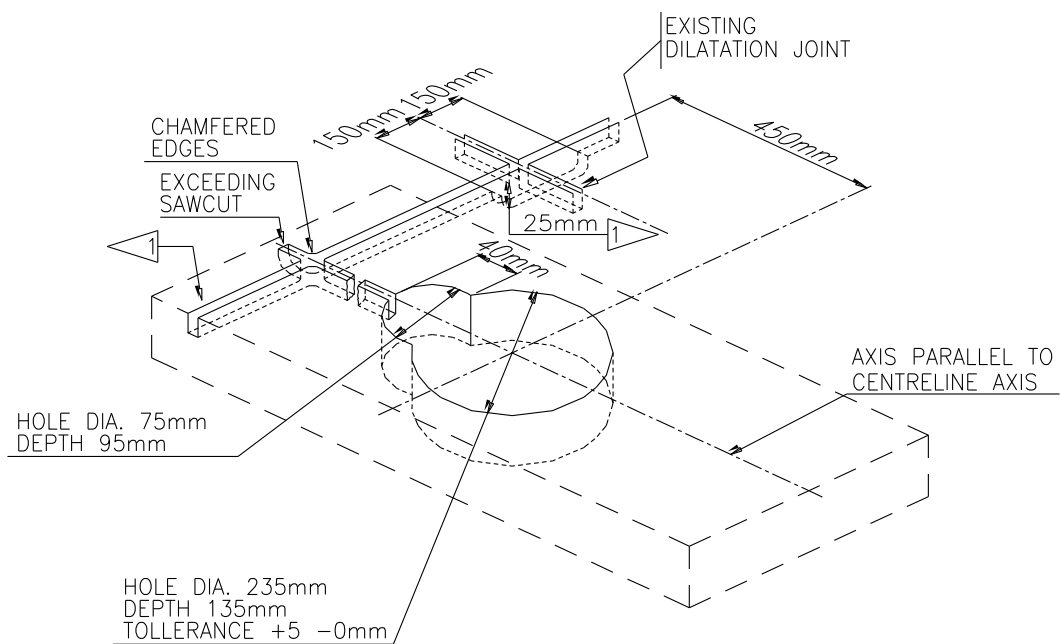

NOTE:

1 12" SHALLOW BASE :  
BASE HOLE : DIA: 340mm - 160 mm DEEP ( +5 ; -0 )  
CABLE GLAND HOLE : DIA: 75mm - 120 mm DEEP

*Figure 10 – Pavement Boring, Sawcutting and Joint Intersection Details*

Make sure the recess size and depth are maintained within the specified limits. All surfaces of the recess must be clean and dry. If any of these surfaces is damp, it is desirable that it be dried and blown clean with a compressed air blast. The recess side walls must be perpendicular to the pavement surface. The bottom surface must be flat or slightly concave to assure that the shallow base rest securely and in true position. The recess can best be drilled using a diamond-faced core drill in a sturdy, stable drill rig.


Mark on the pavement surface the aiming direction of the light by chalk, nails or other devices.

### 3.2 INSTALLING THE SHALLOW BASE

Two different installations are possible:

- Method “A” – cable leads to be laid in wireways
- ▣ Method “B” – cable leads to be laid in cable ducts (Figure 14)

Proceed as follow to realize a proper installation.

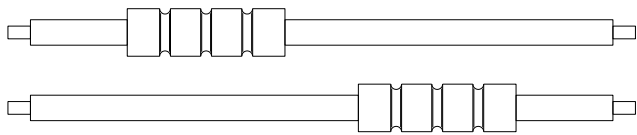STEP	A	B	ACTIVITY DESCRIPTION
1	•	▣	Take the base from the shipping box.
2	•	▣	To assure an adequate bond between base and hole all external surfaces of the base should be sandblasted and must be cleaned with solvent. <b>TAKE CARE NOT TO DAMAGE THE ELECTRICAL SYSTEM.</b>
3	•	/	Connect an insulated G/Y grounding wire of suitable length to the grounding screw externally provided on the wall of the base.
4	•	/	<p>Splice the light base leads to the power cables using solderless squeeze connectors, as shown in the figure, crimped with the proper tool. Connect also the grounding wire to the main grounding network by using a suitable clamping lug.</p>  <p><b>ATTENTION: Insulate each splice carefully using either heat shrinkable insulating tubing properly applied or at least three layers of plastic electrical insulating tape applied with half overlap.</b></p>
5	•	▣	<u>Mount the positioning jig (P/N 332.4301) on the base as shown in Figure 15. An optical device for proper fixture orientation is available (P/N 332.4351 Figure 16).</u>
6	•	/	Properly arrange the leads in the wireways using small pieces of insulating tape if necessary.
7	•	▣	Completely cover the bottom of the base with sealer material, apply a thin coat of sealer to the bottom of the drilled hole to assure a bond between the bottom of the light base and the drilled hole. It may be necessary to place temporary plugs so as to block the wireways entrances into the drilled hole (METHOD “A”) or the cable ducts entrance (METHOD “B”). The plugs will retain



Edition 08/01/2019


Supersedes edition 05/07/2017

 LED INSET HELIPORT LIGHT LHI  
 INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

STEP	A	B	ACTIVITY DESCRIPTION
			<p>the sealer while it begins to dry up.</p> <p><b>ATTENTION: avoid starting the installation when the ambient temperature is below 10°C (86°F), unless the sealer used is designed to dry up at a lower temperature.</b></p>
8	•	☐	<p>Push the base into the recess until its upper side is at the level of the pavement surface; take care no sealer flowing inside the base. Align the notch of the base with the markings on the pavement surface.</p>
9	•	/	<p>Observing the circular level fixed on the jig, level the jig by operating the three leveling lobe knobs (Figure 15). If necessary, a weight may be placed on the jig to hold the light base in position.</p> <p>The remainder of the space between the sides of the shallow base and the drilled hole should be filled with sealer up to approx 25 mm from the pavement, according to the local needs.</p> <p>Fill the remaining 25 mm with a suitable joint sealing filler.</p>
10	/	☐	<p>Observing the circular level fixed on the jig, level the jig by operating the three leveling lobe knobs (Figure 15). If necessary, a weight may be placed on the jig to hold the light base in position.</p> <p>When the shallow base is in its final position, the conduit(s) must be properly jointed to the hole(s) provided on the shallow base. This(these) hole(s) can be provided either on the wall either on the bottom, the number and the dimensions according to customer requirements (Figure 13 and Figure 14).</p> <p>The remainder of the space between the sides of the shallow base and the drilled hole should be filled with sealer up to approx 25 mm from the pavement, according to the local needs.</p> <p>Fill the remaining 25 mm with a suitable joint sealing filler.</p>
11	/	☐	<p>Lay the secondary power cable, equipped with a suitable two-pole receptacle kit, and the grounding wire inside the cable duct.</p>

LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

STEP	A	B	ACTIVITY DESCRIPTION
12	●	■	<p>To install a 8" fixture place the O-Ring around the dome (Figure 11- n°1) and between fixture and base (Figure 11- n°2), for 8" fixtures with adaptor ring place the O-Ring between fixture and base (Figure 12- n°3).</p> <p>To install a 12" fixture place the O-Ring around the dome (Figure 12- n°1) and between fixture and base (Figure 12- n°3).</p> <p>Connect the plug and the grounding wire of the fixture with the receptacle and the grounding wire of the base; press the fixture by hand onto the base and secure it using the six (12" base) locking screws complete with washer, one drop of screw paste (e.g. Dow Corning Molycote 1000) should be applied to the screws before installation; two screws are used for 8" base, one drop of anaerobic adhesive, medium type (e.g. Loctite 243) should be applied.</p> <p>Tightening torque is 35 Nm.</p> <p><b>ATTENTION: The fixture is subject to mechanical damage and/or optical misalignment if not properly seated on the base flange.</b></p>

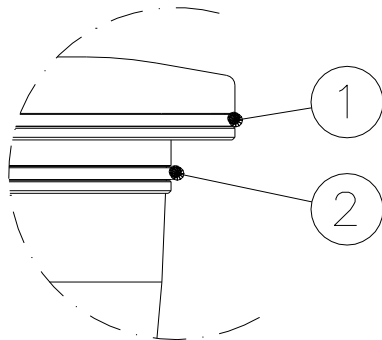


1. O-Ring around the dome
2. O-Ring between fixture and base

Figure 11 – Gaskets for 8" shallow base

Edition 08/01/2019

Supersedes edition 05/07/2017

LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

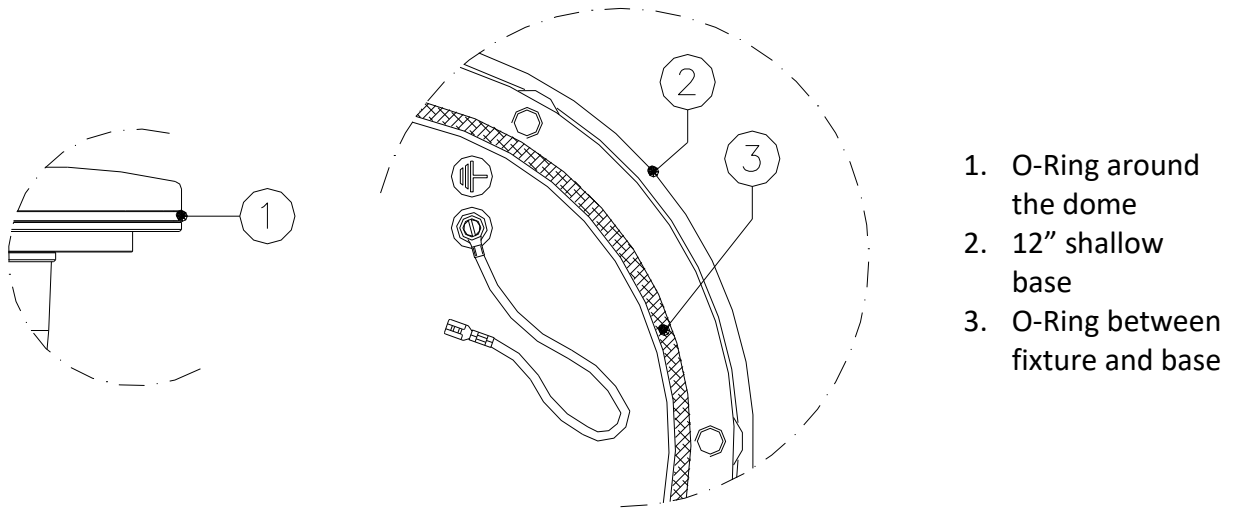

*Figure 12 – Gaskets for 12" shallow base*

Edition 08/01/2019

Supersedes edition 05/07/2017

LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

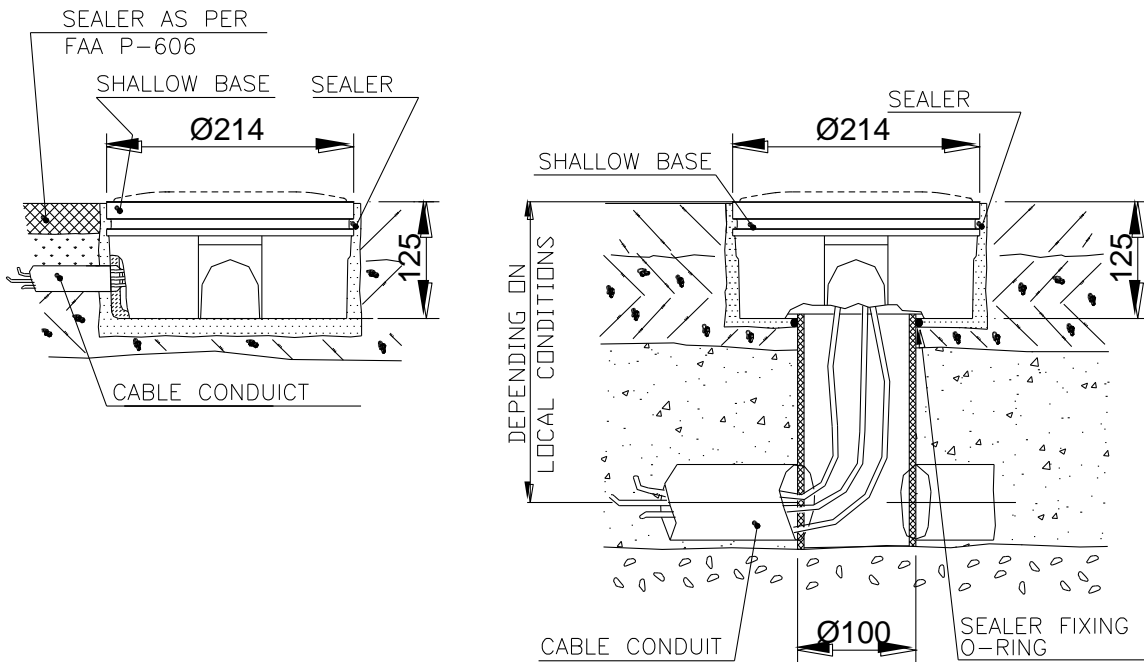


Figure 13 – 8" shallow base for side or bottom ducts (method "B")


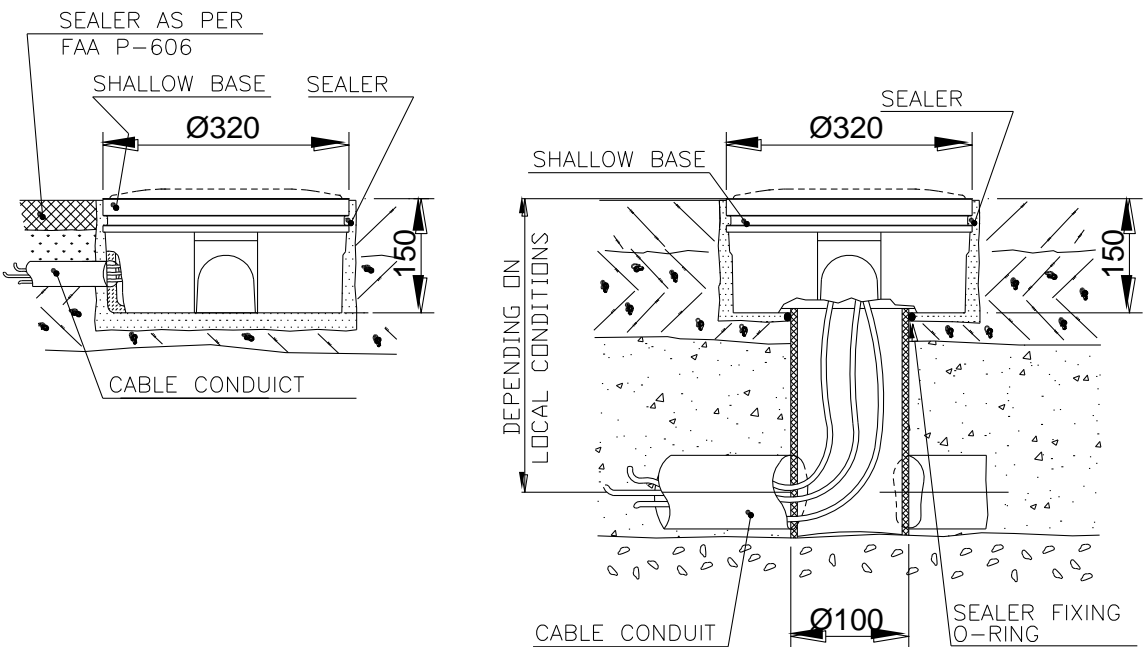


Figure 14 – 12" shallow base for side or bottom ducts (method "B")

Edition 08/01/2019


Supersedes edition 05/07/2017

LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

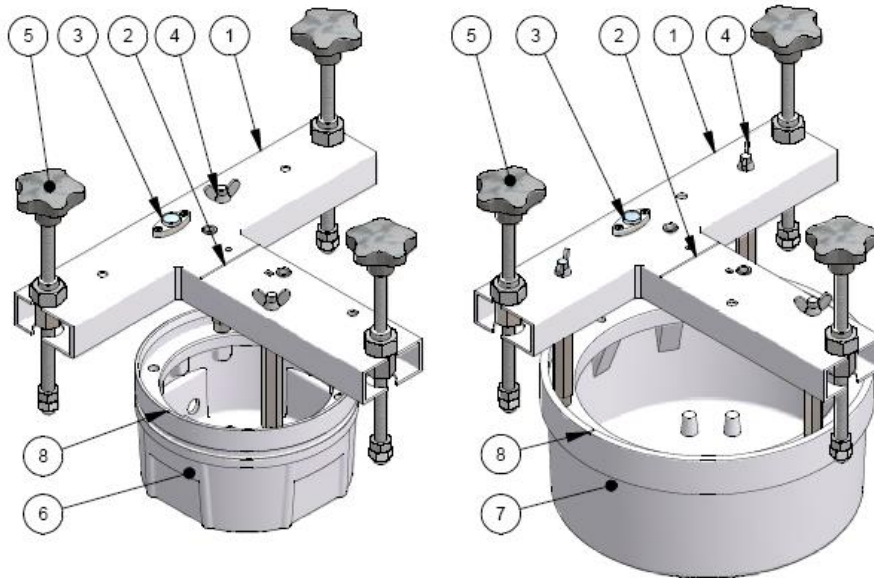

1. Positioning jig
2. Align the jig notch with the mark on the pavement
3. Circular level
4. Screws and spacers for the jig mounting
5. Lobe knob for positioning jig levelling
6. 8" shallow base
7. 12" shallow base
8. Shallow base notches aligned with the notch on the jig

Figure 15 – Shallow base installation details

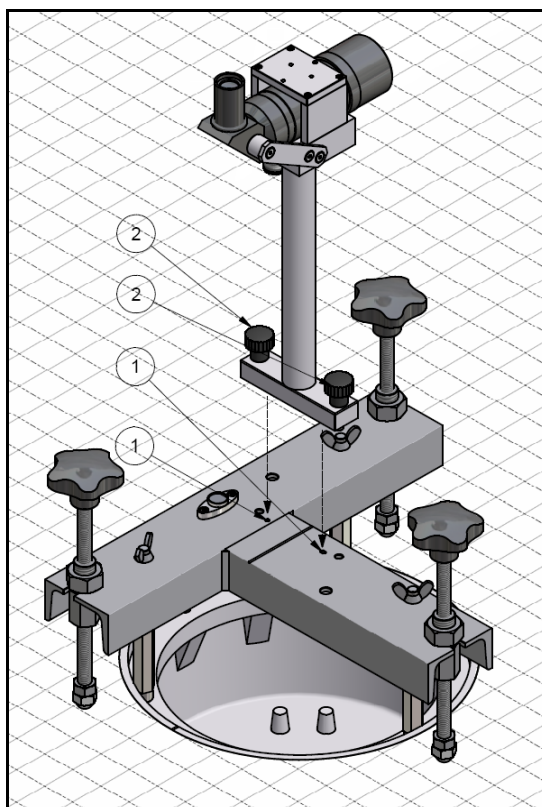

1. Positioning jig holes for optical device reference pins
2. Fixing knobs

Figure 16 – Optical device (refer to the manual UT-MT-0485 for further information)

Edition 08/01/2019

Supersedes edition 05/07/2017

LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

### 3.3 SECONDARY WIRING

---

The IEC 61823 International Standard (AGL series transformers) states at para. 4.6 that “if an earthing connection is provided, it shall be connected to the larger socket of the transformer secondary connector.”

This means that, when a fixture is directly connected to the relevant isolation transformer (provided with earthing connection), the fixture secondary side is wired to the grounding network through the larger pin of fixture plug.

In case of an inset fixture, installed in the taxiway/runway pavement on its shallow base far from the relevant isolation transformer, it is necessary to provide a secondary extension between fixture and transformer. To help the installer to identify the larger socket of the female connector inside the base (when installed), the base secondary cable leads are identified by a colour code: the grey wire is wired to the larger socket, the black wire to the other one. In this way it will be easy to assure the earthing wiring, above described, between the larger socket of the transformer secondary connector and the larger pin of the fixture plug.

## 4 MAINTENANCE

---

**WARNING**  
**BEFORE ANY MAINTENANCE INTERVENTION, MAKE SURE**  
**THE POWER SUPPLY BE SWITCHED OFF.**  
**DO NOT OPERATE ON LIVE PARTS!!!**

LED lighting fixtures do not require frequent maintenance. With well-run installations and handling fixture carefully, avoiding excessive falls or collisions, the only maintenance work to be carried out on the field is to clean the prisms.

### 4.1 REMOVING AND OPENING THE LIGHT UNIT FROM THE BASE

---

#### 4.1.1 Removing the fixture

- Remove the fixture from the base, after switching off, by unscrewing the two locking screws complete with washers.

Edition 08/01/2019

Supersedes edition 05/07/2017

LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

- Raise the fixture by using the two lifting tools (P/N 332.4140 or 332.4230) inserted in the suitable slots provided on the dome. As an alternative, two screwdrivers can be used.
- Disconnect the fixture plug/s and grounding cable from those inside the shallow base.

4.1.2 Opening the fixture

- Unscrew the leak valve cap and push the valve central pin, in this way the light internal pressure is the same of the atmospheric pressure.
- Open the fixture by unscrewing the three locking screws HSFH M5x10 (Figure 18 - n°1).
- Every time the fixture is opened, inspect the following parts and replace them if necessary:
  - lens, if it is dirty or damaged
  - lens gasket, check the integrity
  - cable lead with plug

4.1.3 How to Access Lens Assembly

- unscrew the three screws HSCH M5x16 (Figure 17- n° 1) and remove the aluminium ring using two of them into the proper extraction-holes (Figure 17 - n° 2)

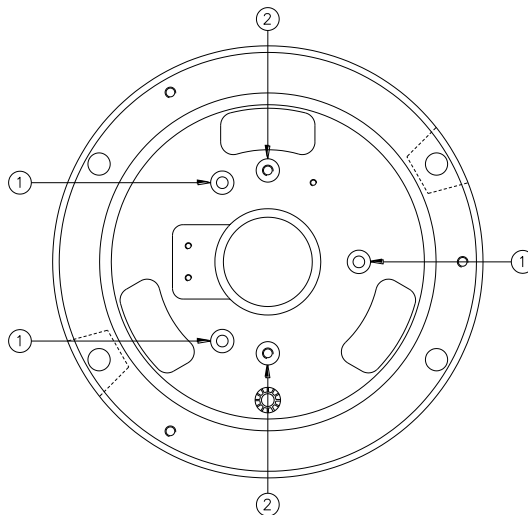


Figure 17 – Removing the Aluminium Ring

4.1.4 Closing the fixture

Every time the fixture is opened **replace** the following items with a new ones:

- three locking screws HSFH M5x10 (Figure 18 - n°1);
- O-Rings between dome and lower cover (Figure 20 – n°2);

Verify the correct position of O-Ring between dome and lower cover (Figure 20 – n°2);, mount the lower cover on the dome and fasten it by means the three screws

LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

HSFH M5x10 (Figure 18 - n°1). One drop of anaerobic adhesive lower type (e.g. LOXEAL 24-18) should be applied to the screws before installation; tightening torque is 2.5 Nm.

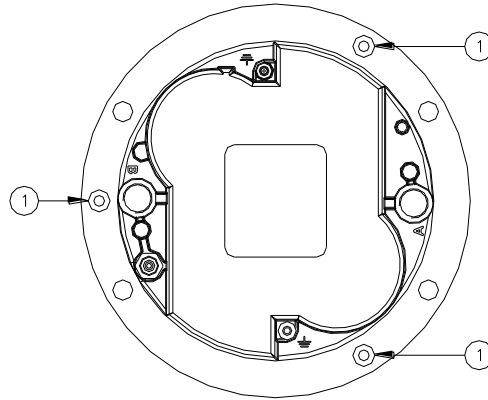


Figure 18 - Lower Cover Fixing Screws

4.1.5 Leakage test

The assembly should be given a 1.38 kPa air pressure test. This can be done by connecting an external air pressure line to the valve (Figure 19– n°2) provided on the lower cover. Immerse the assembly under water, so air loss will be easily viewed if some part is damaged or assembling is wrong.

If there is no air loss then test is passed successfully.

Light unit is ready to be field installed.

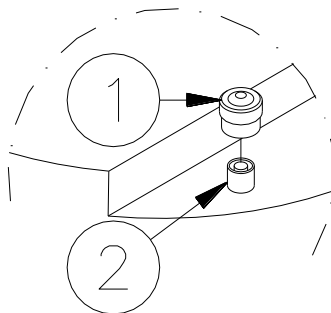


Figure 19 - Lower Cover with Pressure Valve


4.1.6 Reinstalling the fixture

Every time the fixture is removed from the base **replace** the following items with a new ones making sure that are right placed in the relevant groove:



LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

- the two special seal lock washers;
- O-Ring around the dome (Figure 20 – n°3);
- Gasket between fixture and 8" shallow base (Figure 20 – n°4);
- O-Ring between fixture and 12" shallow base (Figure 20 – n°7);
- The fixture is ready to be field installed.

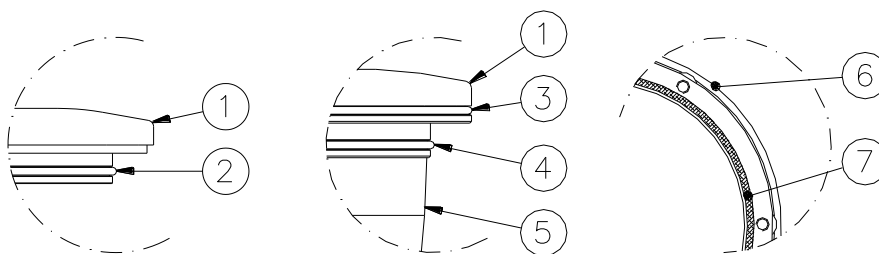

1. Dome
2. O-Ring between dome and lower cover
3. O-Ring around the dome
4. O-Ring between fixture and shallow base
5. Lower Cover
6. 12" Shallow base
7. O-Ring between fixture and 12" Shallow base

Figure 20 – Fixture Gaskets

## 4.2 LENS CLEANING

### 4.2.1 Lens outside cleaning

- Removing the fixture is not necessary to clean the outer surface of the lens, and if already removed is not necessary to open it. Clean the lens surface with non abrasive glass product.

### 4.2.2 Lens inside cleaning

Normally the cleaning of the lens inside surfaces is not necessary because fixture is watertight. Whenever it is necessary, remember the following rules.

Remove the fixture from the base and open it following instructions of "Removing and Opening the Light Unit From the Base" and proceed as follows:

- turn the aluminium ring upside down as shown in Figure 21 and polish the lens (Figure 21 - n° 1) with non abrasive glass product
- dry them carefully

Close the light fixture following instructions of paragraph "Closing the Fixture", "Leakage Test" and "Reinstalling the fixture".

Edition 08/01/2019

Supersedes edition 05/07/2017

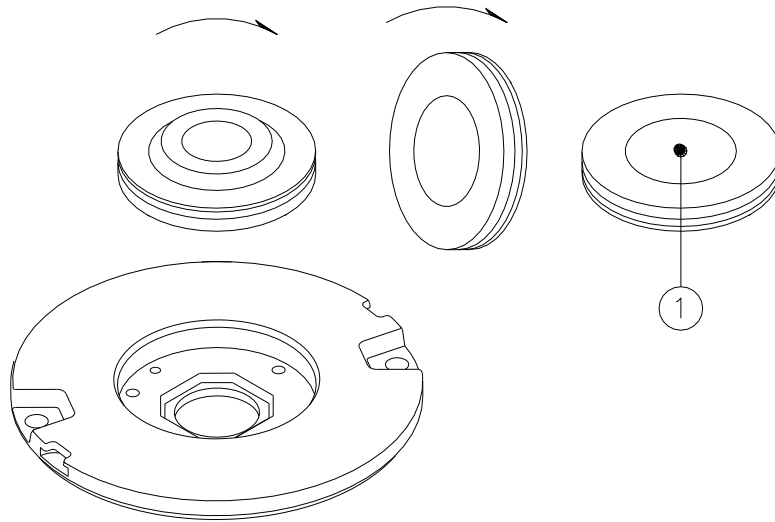
LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

Figure 21 – Lens Surface to be Cleaned

### 4.3 LENS REPLACEMENT

---

If the lens is damaged it must be replaced as described below.

It is highly recommended to do a complete overhaul of the fixture. Contact OCEM - ENERGY TECHNOLOGY for any suggestion.

#### 4.3.1 Removing the Lens

Remove the fixture from the base and open it following instructions of “*Removing and Opening the Light Unit From the Base*” and proceed as follows:

- clean out possible pieces of the old lens and all accumulated debris from inside the fixture
- remove the old lens and the gasket (Figure 22 – n°2-3), carefully clean the lens seat by scraping and taking care not to damage the relevant walls.


#### 4.3.2 Installing the New Lens

- place a new gasket (Figure 22 – n°2) around the lens
- position and press by hand this assembly into the aluminium ring
- inspect all components inside the light unit for damages or signs of corrosion and replace it if necessary.

Close the light fixture following instructions of paragraph “*Closing the Fixture*”, “*Leakage Test*” and “*Reinstalling the fixture*”.

Edition 08/01/2019


Supersedes edition 05/07/2017

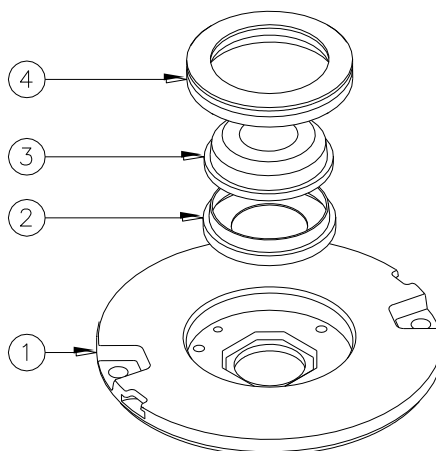LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE*Figure 22 - Lens Replacement***4.4 LED MODULE REPLACEMENT**

Remove the fixture from the base and open it following instructions of *“Removing and Opening the Light Unit From the Base”* and proceed as follow:

- disconnect the power supply connector from the LED module (Figure 23 – n°2)
- replace the entire LED module with a new one complete with collector lens (Figure 23 – n°2)
- reconnect the power supply connector to the LED module (Figure 23 – n°2)

Reassembly the fixture following instructions of paragraph *“Closing the Fixture”*, *“Leakage Test”* and *“Reinstalling the fixture”*.

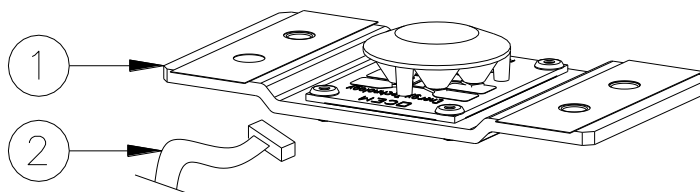*Figure 23 - LED Module Replacement***4.5 ELECTRONICS REPLACEMENT**

Remove the fixture from the base and open it following instructions of *“Removing and Opening the Light Unit From the Base”* and proceed as follow:

- disconnect the power supply connector(s) from the LED module(s)
- replace the entire lower cover with a new one complete with electronic section
- reconnect the power supply connector(s) to the LED module(s)

Reassembly the fixture following instructions of paragraph *“Closing the Fixture”*, *“Leakage Test”* and *“Reinstalling the fixture”*.

## 4.6 GASKETS

### 4.6.1 Gasket examination


Every time a fixture is opened each O-Ring must be examined as described below and **replaced** if necessary.

Any O-Ring that is stretched, torn, has a permanent set or some other defect, which would prevent it from obtaining a water-tight seal **must be replaced with a new O-Ring**.

Remove the fixture from the base and open it following instructions of *“Removing and Opening the Light Unit From the Base”*.

Light assembly is equipped with the following gaskets:

- O-Ring between dome and lower cover (Figure 24 - n°2);
- O-Ring around the dome (Figure 24 - n°3);
- Gasket between fixture and 8” shallow base (Figure 24 - n°4);
- O-Ring between fixture and 12” shallow base (Figure 24 - n°7);
- lens gasket mounted between lens and dome (Figure 25- n°2).

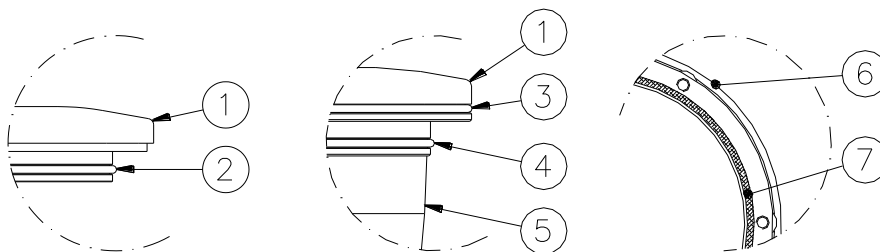

1. Dome
2. O-Ring between dome and lower cover
3. O-Ring around the dome
4. O-Ring between fixture and shallow base
5. Lower Cover
6. 12” Shallow base
7. O-Ring between fixture and 12” Shallow base

Figure 24– Fixture Gaskets

Edition 08/01/2019

Supersedes edition 05/07/2017

LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

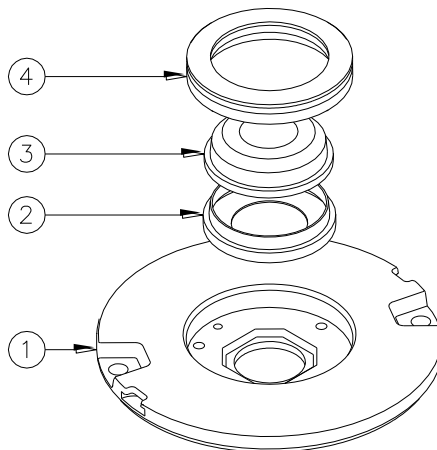


Figure 25 – Lens Gasket

#### 4.6.2 O-Ring replacement

Remove the old O-Ring from the groove and clean the flange mating surfaces and the groove, scraping carefully. Take care not to damage the mating surface and the bottom and sides of the groove. Position it in the centre of its groove and push it inside.

**NOTE 1:** Make sure that the proper O-Ring is re-inserted into the groove.

**NOTE 2:** The seat of an O-Ring gasket is dimensioned to allow the proper positioning when compressed between the mating surfaces. Screws properly tightened are important in obtaining a complete seal.

TIGHTENING TORQUE	
lower cover HSCS M5x10	2.5 Nm
fixture locking screw	35 Nm (for shallow base)
	25 Nm (for L-868 base, size B)

## 4.7 CABLE LEAD WITH PLUG

### 4.7.1 Removing the cable lead with plug

Remove the fixture from the base and open it following instructions of “*Removing and Opening the Light Unit From the Base*”.

Inside the lower cover, disconnect the pair of wires from the electronics by cutting the cables, unscrew the gland and pull out the cable lead with gland gasket.

#### 4.7.2 Installing the new cable lead with plug

Insert on the new power supply cable lead with plug (Figure 26 – n° 1) the new gland nut (Figure 26 – n° 2) with teflon washer (Figure 26 – n° 3), metal washer (Figure 26 – n° 4) and then the new gland gasket (Figure 26 – n° 5) so that the available length of cables outside the fixture is approx. 50 cm when re-assembled. Pull both cables through the suitable hole provided in the bottom of the lower cover; then splice each cable for a length of approx. 7 mm and clamp the female faston terminal to the cable (Figure 26 – n° 6) and the male ones to the electronics wires.

Place the gland gasket inside its seat and tighten the gland nut. Restore internally the electrical connections.

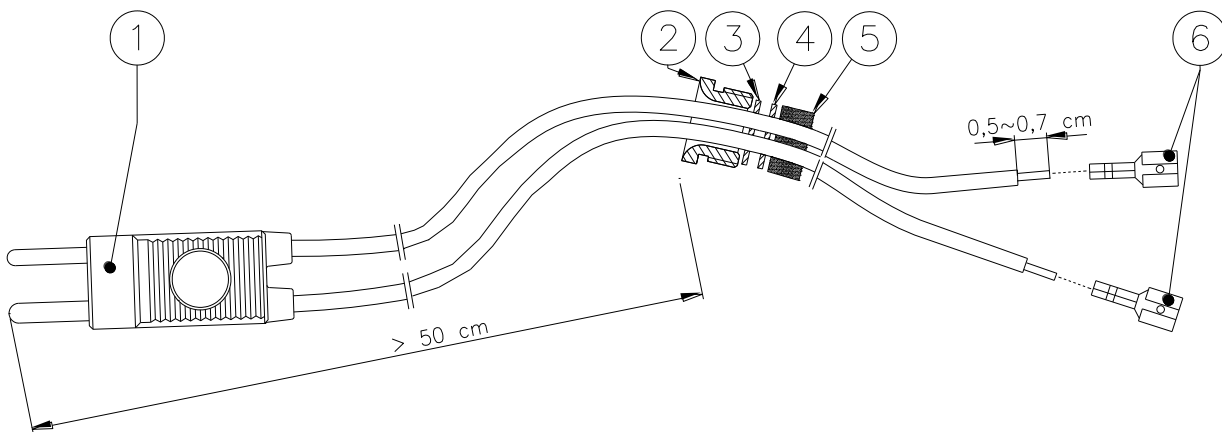


Figure 26 - Cable Lead With Plug

Close the light fixture following instructions of paragraph “Closing the Fixture”, “Leakage Test” and “Reinstalling the fixture”.

## 4.8 PRESSURE VALVE

If a leakage is found through the pressure valve during an air pressure test, check carefully where the leakage happens. If the leakage is between the valve (Figure 27 - n°2) and the lower cover (Figure 27 - n°1), check the tightening of the valve body to the lower cover from the outside of the fixture.

In case the pressure valve needs replacing operate as follows, considering the fixture already opened following instructions of “Removing and Opening the Light Unit From the Base”. Unscrew the valve body with gasket from the outside of the lower cover (Figure 27 - n°1) by clamping the hexagonal end section of the valve body. Screw the new valve on the lower cover; tightening torque is 0.35 Nm. Check the valve core (Figure 27 - n°4) is tightened to the valve body (Figure 27 - n°2) and then screw its cap (Figure 27 - n°3).

Reassembly the light unit following instructions of paragraph “Closing the Fixture”, “Leakage Test” and “Reinstalling the fixture”.

Edition 08/01/2019

Supersedes edition 05/07/2017

LED INSET HELIPORT LIGHT LHI  
INSTRUCTION MANUAL FOR USE, INSTALLATION AND MAINTENANCE

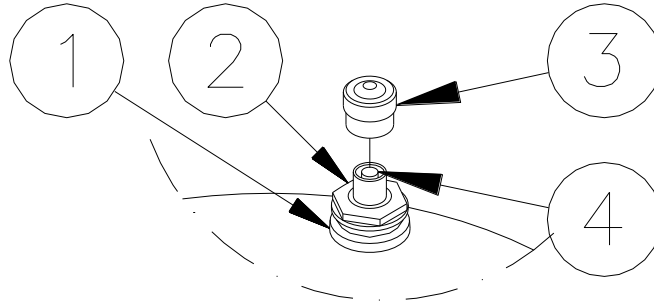


Figure 27 - Lower Cover with Pressure Valve

**5 TROUBLESHOOTING**

Problem	Possible cause	Solution
Distorted light beam output	Broken or damaged prism	Replace prism
	Wrong prism installed	CHECK PARTS LIST AND INSTALL THE CORRECT PRISM
Weak light output	Primary loop with partial short circuit	Check cable assembly
	Defect in the isolation transformer	Replace transformer
	Dirty prism or dome	Clean the light fixture
	One LED of the luminous source damaged in short circuit	Replace the LEDs board
	Wrong power PCB installed	Check parts list and install the correct PCB
Luminous source not working	LEDS DEFECTIVE	Replace the LEDs board
	POWER PCB DEFECTIVE	Replace the Power PCB
	Moisture inside the fixture	Execute leakage test and replace damaged components. Clean and dry the inside area of the fixture
	No connection of primary circuit	Check transformer output current with A-meter
	Defective isolation transformer or secondary wiring	Check power line between the light fixture and the transformer, including connectors
Water or moisture inside the fixture	Prism gasket, O-rings between dome and lower cover	Replace all gasket and execute leakage test
	Pinched fixture power cables	Replace fixture leads